

Configuration of Traktor 3.3 for Denon DN-HC4500

Introduction

This document is meant as a quick step manual to let the Denon DN-HC4500 controller work together with Traktor 3.3.

1. Download and Installation of Traktor 3.3

You can download the Traktor 3.3 directly from the homepage of Native Instruments. Click this link to get to Traktors site. Here are two installation files. (Win / Mac)

<http://www.native-instruments.com/index.php?id=traktor3>

products > dj line > Traktor 3

HOME | PRODUCTS | SHOP | SUPPORT | COMMUNITY | COMPANY

NI

products > dj line > Traktor 3

TRAKTOR 3

PRODUCT VIDEOS

TRAKTOR 3.3

DETAILS

ALL FEATURES

PRESS VIEWS

DJS

TRAKTOR 3 UPGRADE

TRAKTOR READY

products

Username: me@mydomain.

Password:

Request new password

LOG IN

YOUR LOCATION

Germany

CHANGE LOCATION

PRICE INFORMATION

TRAKTOR 3 Full Version

Price 199.00 EUR

Prices for other versions

RESELLER LIST

ORDER IN THE ONLINE SHOP

DEMO VERSION

Win XP Demo

Mac OS X Demo

NEWS:

TRAKTOR UNITED

TRAKTOR 3.3 update adds TRAKTOR SCRATCH compatibility and more

TRAKTOR 3.3 has arrived, delivering incredible new performance and compatibility for DJs. The new version can now be used with TRAKTOR SCRATCH, giving you hands-on control of all four virtual decks via turntables and CD players. Many other new features make this version the most powerful and intuitive TRAKTOR ever. While TRAKTOR 3 users can download the free update, TRAKTOR SCRATCH users can upgrade to TRAKTOR 3. Check out the new features, or download the new demo for Mac or PC.

Watch the TRAKTOR 3 Video Clips...

Professional DJ Software

TRAKTOR 3 is a versatile and comprehensive digital DJing solution designed to meet the most professional of standards. The third generation of this award-winning software offers breath-taking sound quality coupled with an unprecedented array of new features – sure to get any party rocking. Discover the potential of TRAKTOR 3 and blend a new dimension of creativity into your mix.

PERFECT PRESENT

Buy and activate TRAKTOR SCRATCH before December 31st, 2007, and Native Instruments will give you TRAKTOR 3 on top.

Read more

TRAKTOR 3 VIDEO CLIPS

Learn how to mix and see renowned DJs spin in clubs with TRAKTOR 3.


Read more

TRAKTOR ARTISTS

Bugz in the Attic producer / DJ Daz-I-Kue: "The features are bananas and have made

After download of the software unzip the setup file and double click it to install Traktor 3.3. Start Traktor 3.3 after the installation is completed.

Run the application in the Demo mode. In that mode Traktor 3.3 offers to you the same functional range as a registered version. The one difference is that this application closes automatically after 30 minutes. So you need to restart it again.

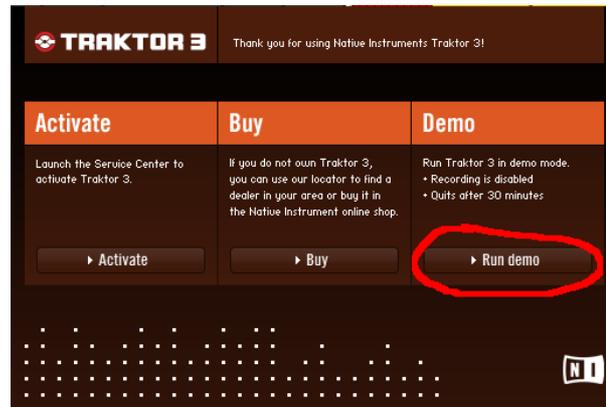

2. Configuration of Traktor 3.3

This chapter shows you how to configure your version of Traktor 3.3 for direct compatibility with the Denon DN-HC4500 controller.


- Be sure that the DN-HC4500 is connected to your computer via a USB port.
(How to connect the device with other hardware like PC / Mixer can be read inside the DN-HC4500 manual)
- Users of Windows XP should also ensure that the most recent version of the DN-HC4500 device driver is installed on their system.
- Save the attached **DN-HC4500_LED (T3.3).tks** file to your hard drive.
- Start Traktor 3.3 and select 'Preferences'




2.1 Preferences

Inside preferences you can do all configurations to let the DN-HC4500 controller work with Traktor 3.3.


- a) Expand the 'Audio Setup' and choose 'Soundcard'

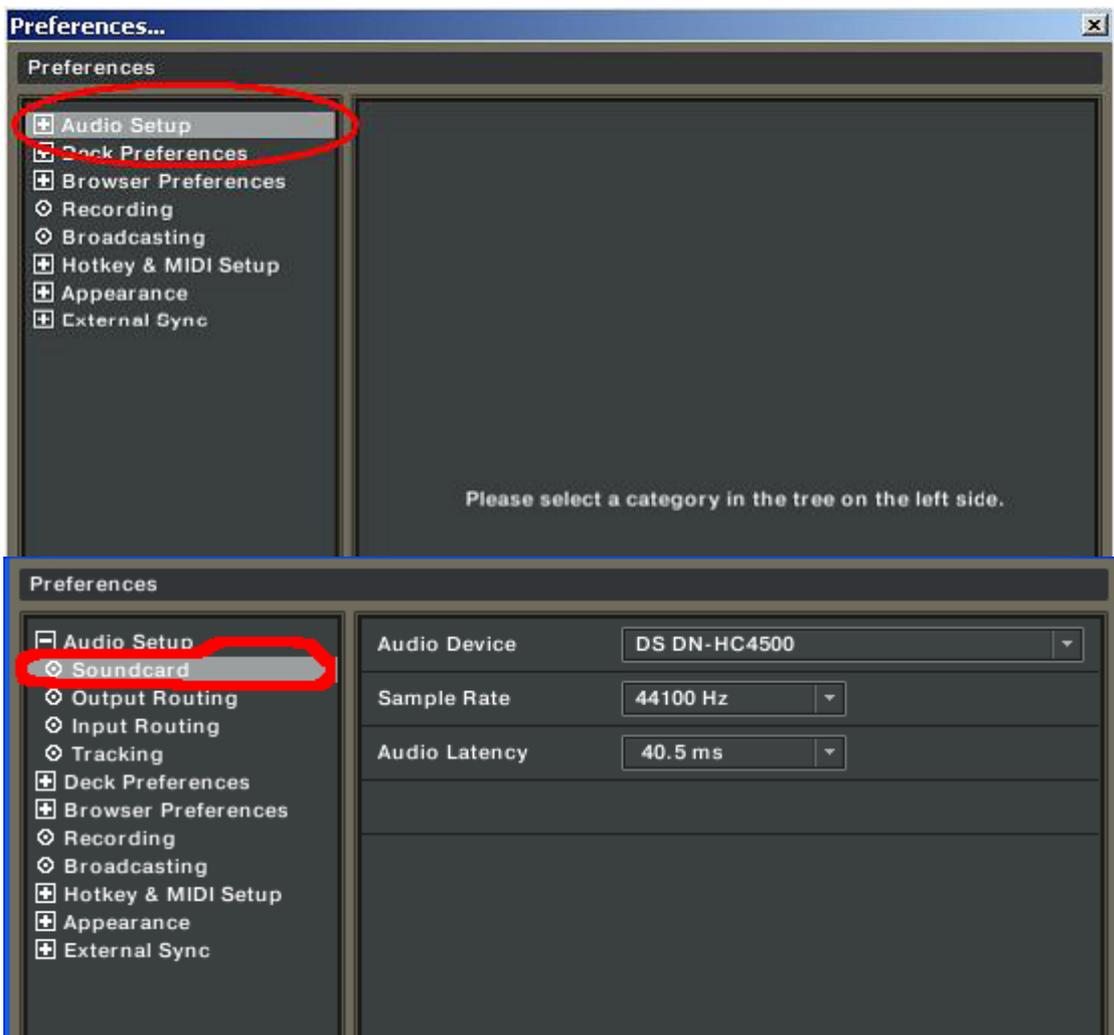


- b) If not already done choose the "Denon DJ ASIO Driver"

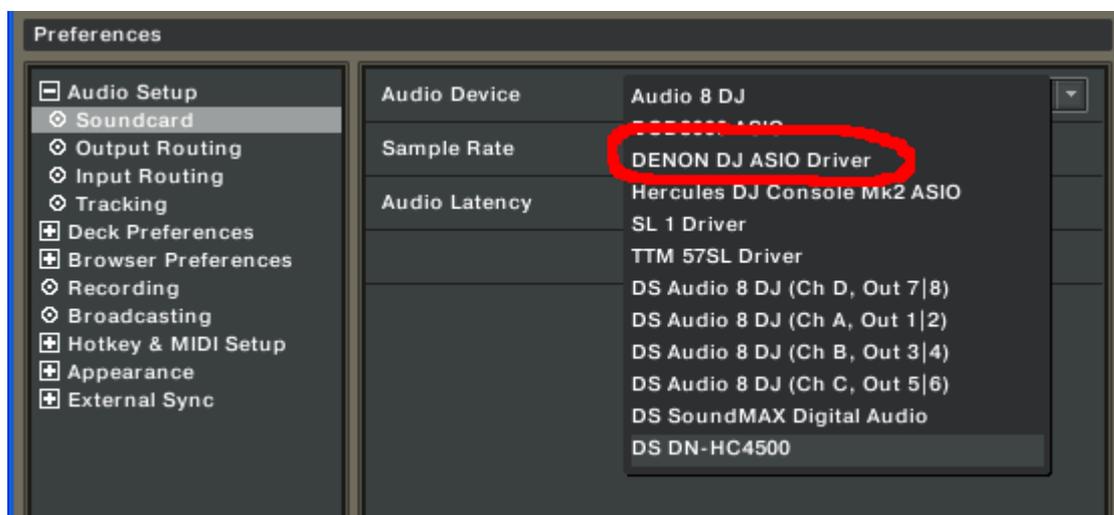


c) Open the DN-HC4500 control panel

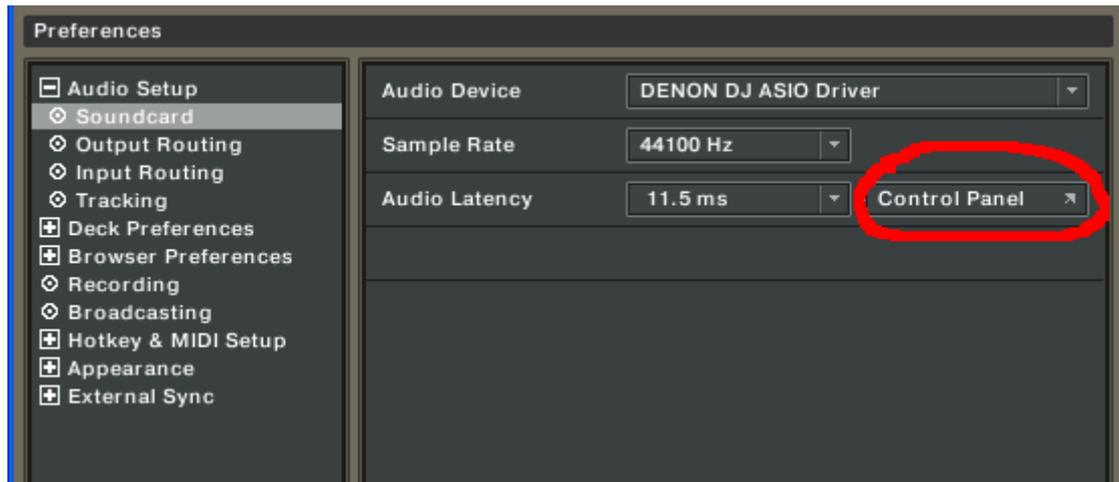


d) Check if your standard settings set and close this panel by clicking 'OK'.

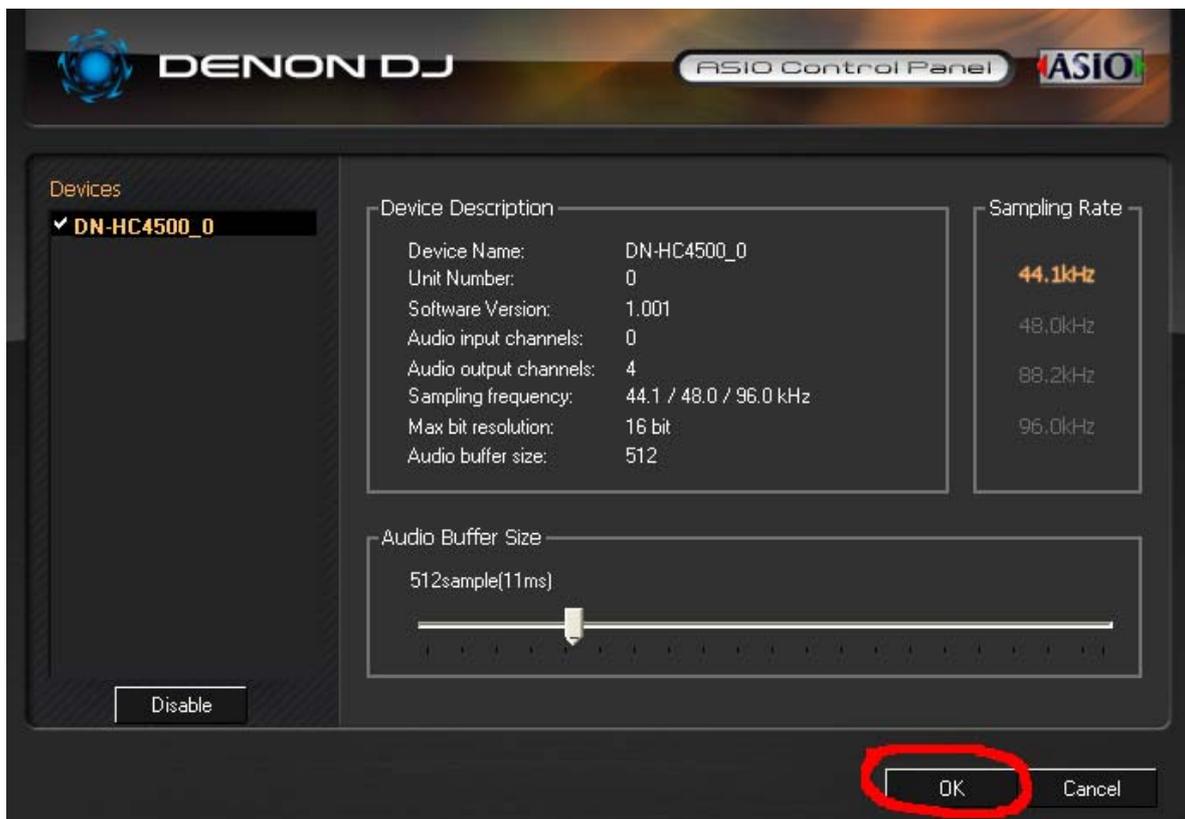

- e) Choose 'Output Routing' and change the Mixer Mode to 'external'. Set the correct outputs to Traktors 'Out Channels'.

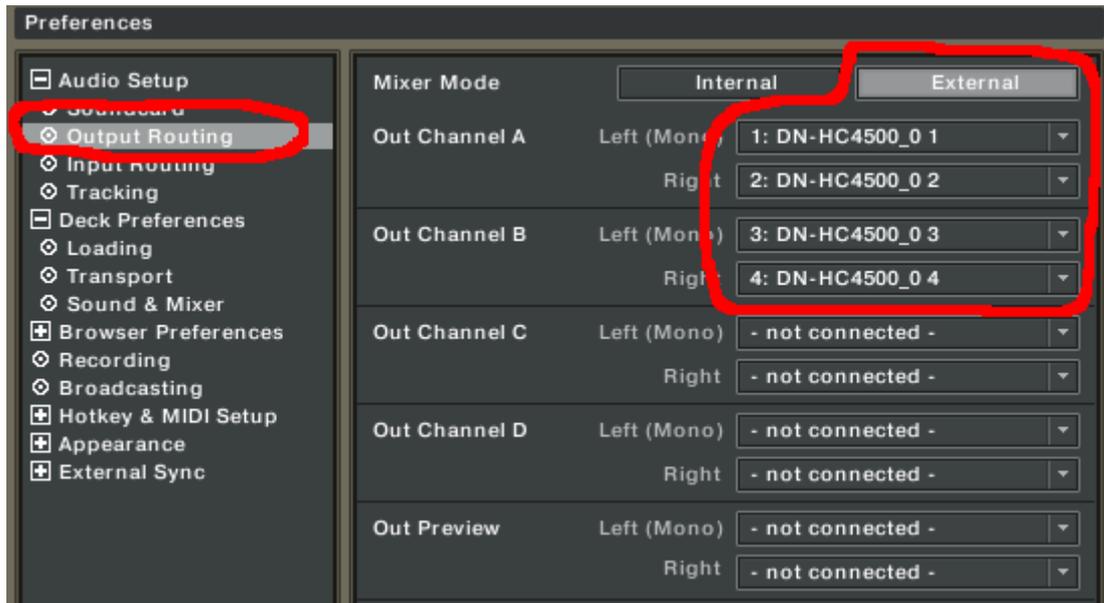



- f) Return to 'preferences' and expand the 'Hotkey & MIDI Setup' menu.

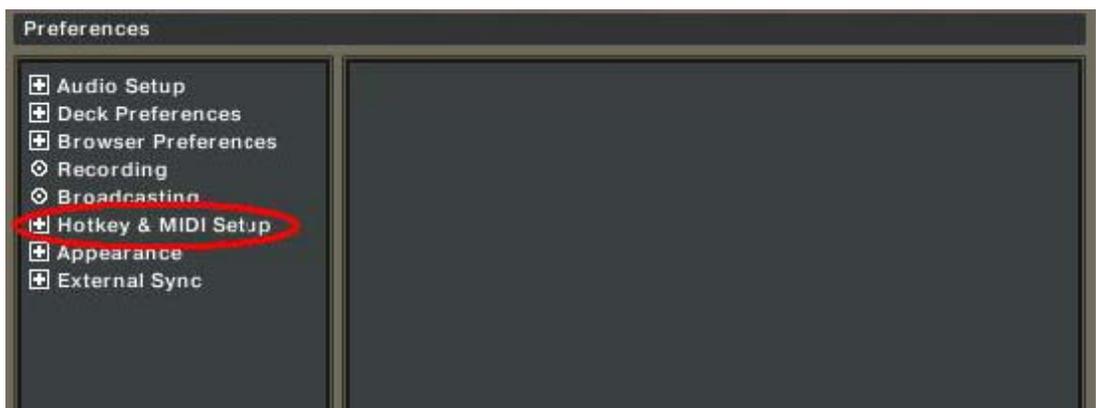


- g) Select 'USB Audio Device' as the midi device. If not already activated, double click the 'USB Audio Device' entry to activate it.




- h) Return to the preferences menu and select "MIDI Setup". Click on 'Load' to open a browser window and select the **DN-HC4500_LED (T3.3).tks** you have stored on your hard drive.

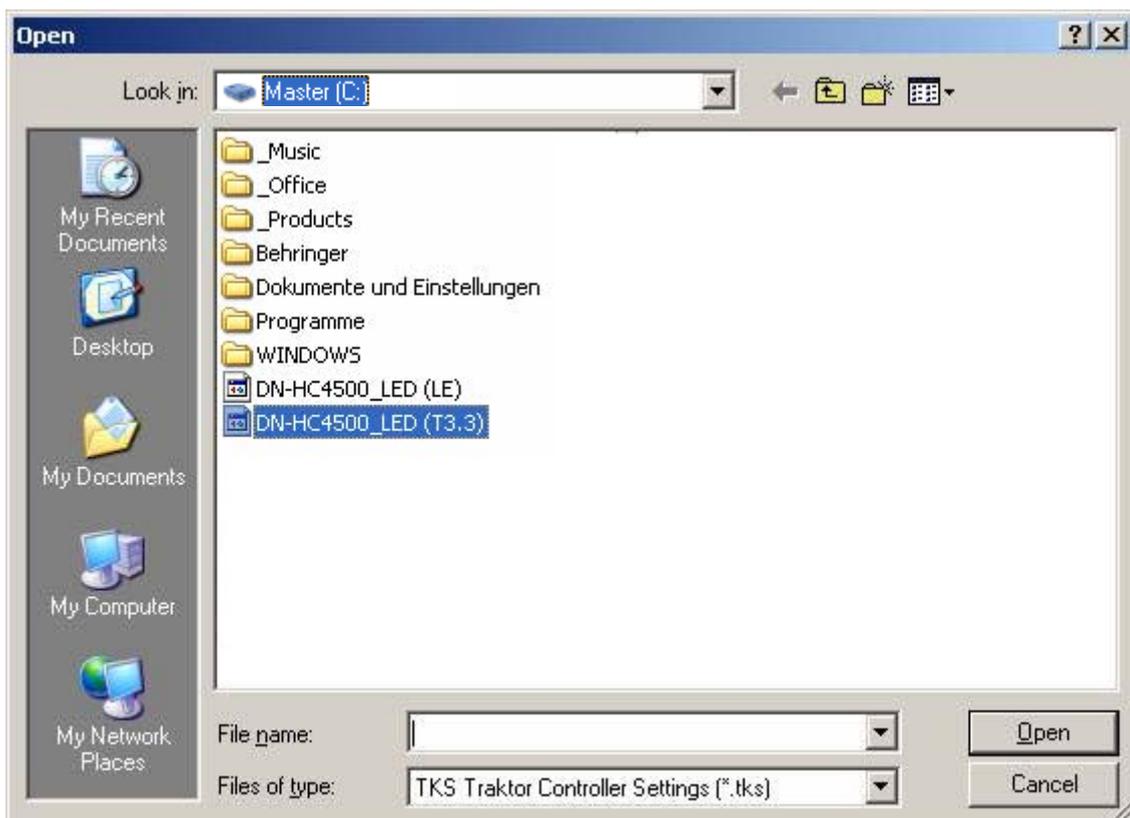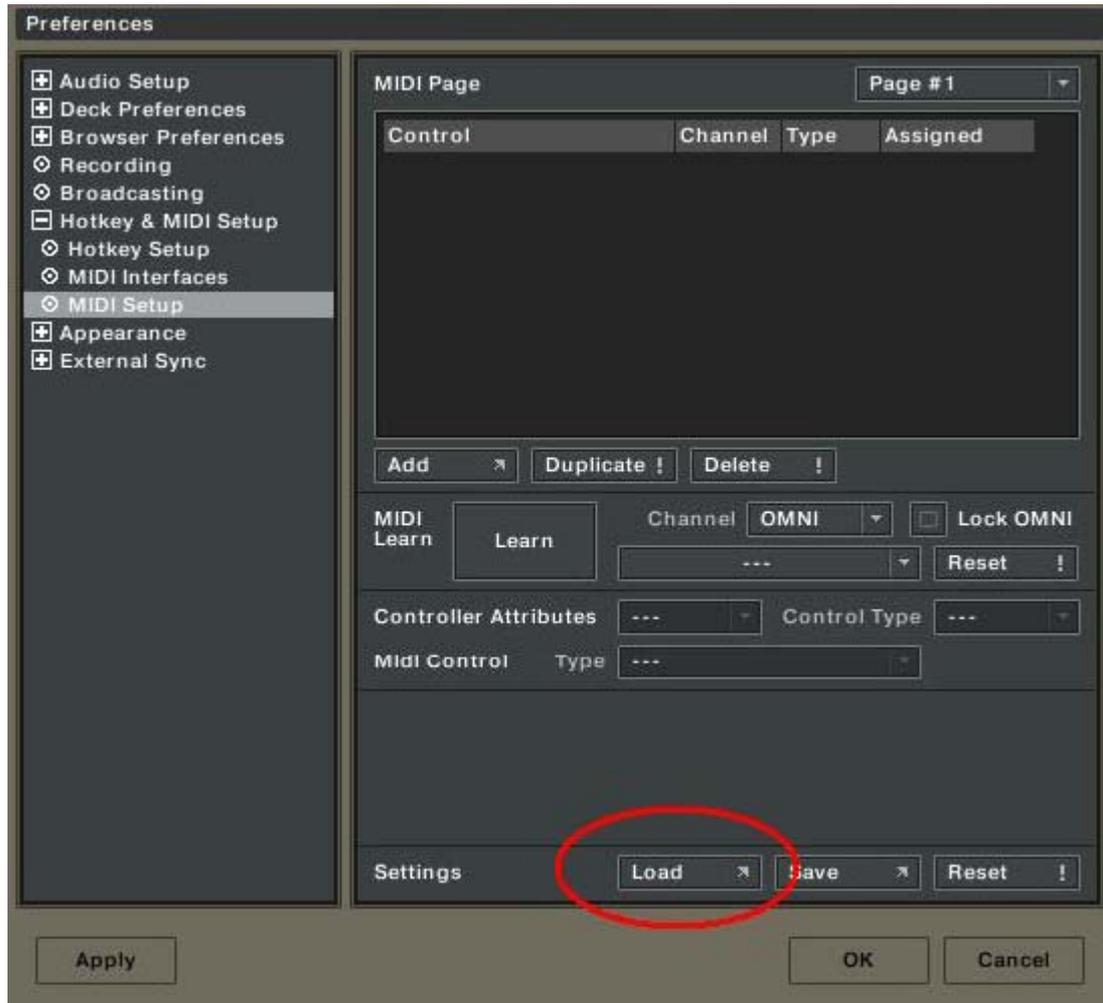

i) Once the file has been imported press 'Apply'.

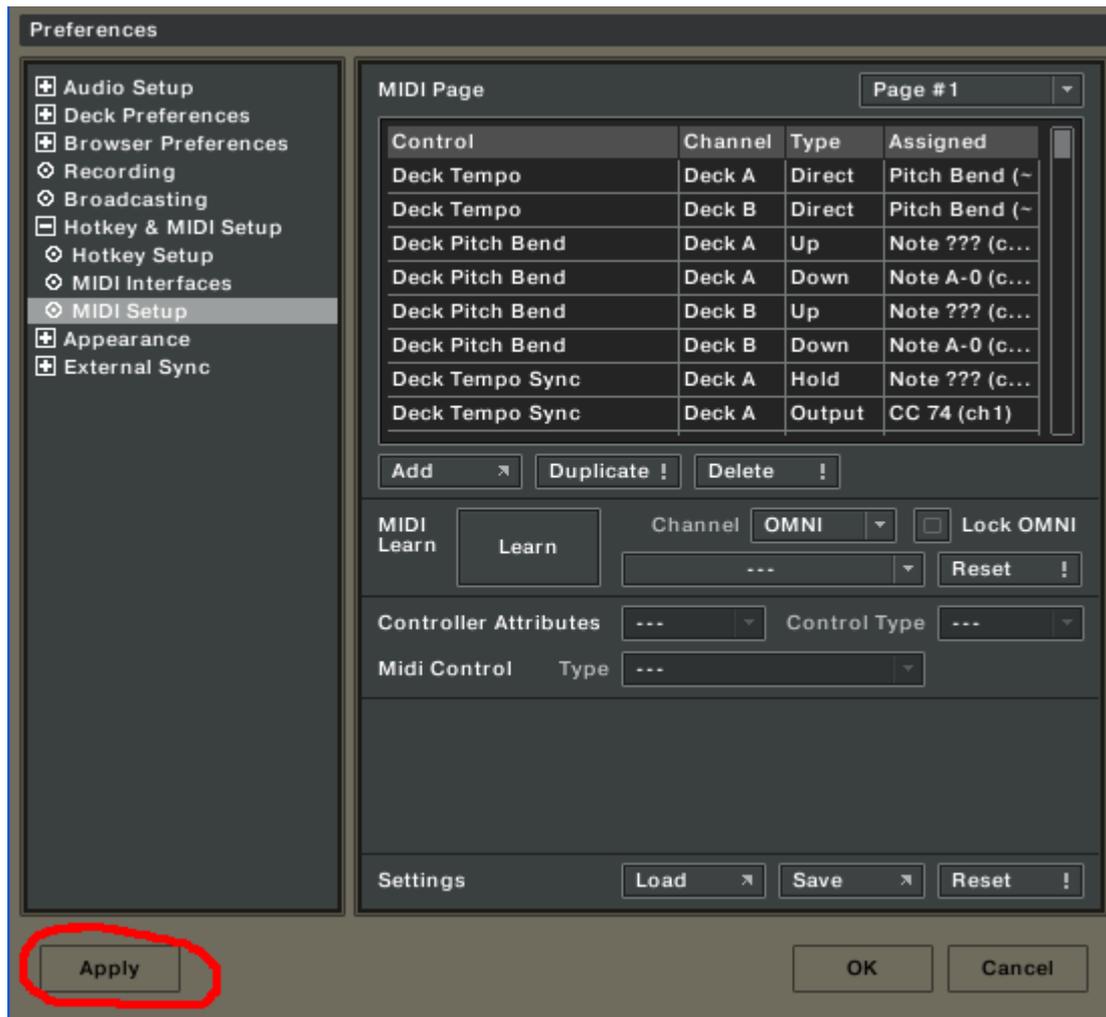


More info about settings and functions of the Traktor 3.3 may be found in the user manual.

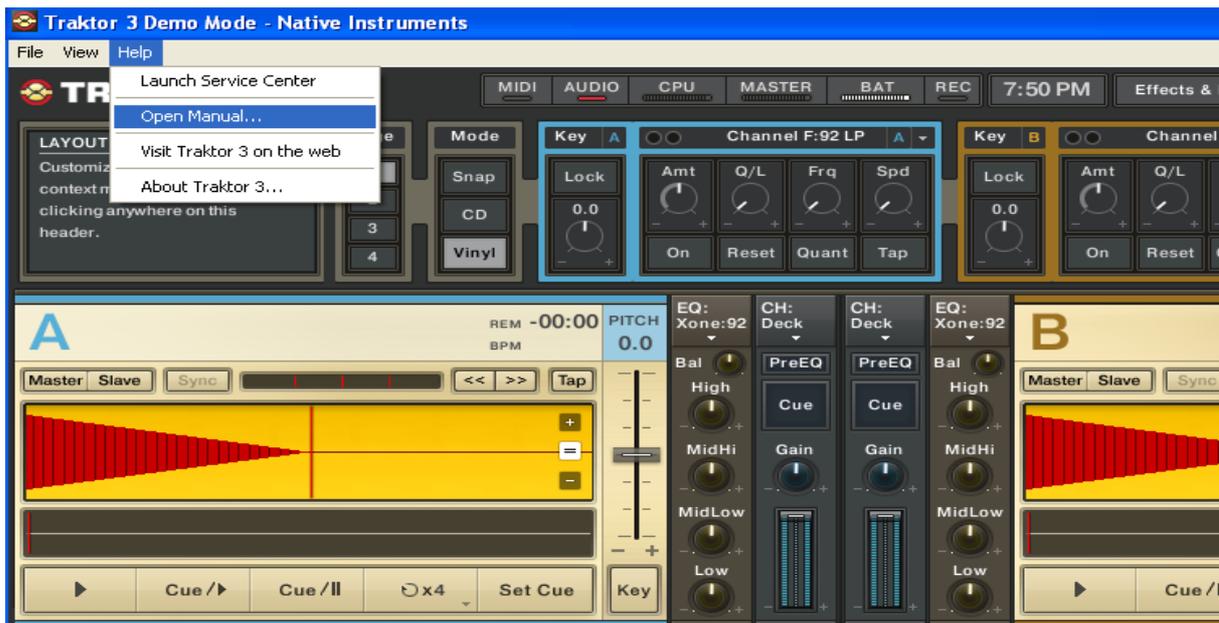

You may also find helpful tips and hints about using the software in the NI user forum.

https://www.native-instruments.com/forum_us/forumdisplay.php?f=122

3. Configuration of Traktor 3.3 for Denon DN-HC4500

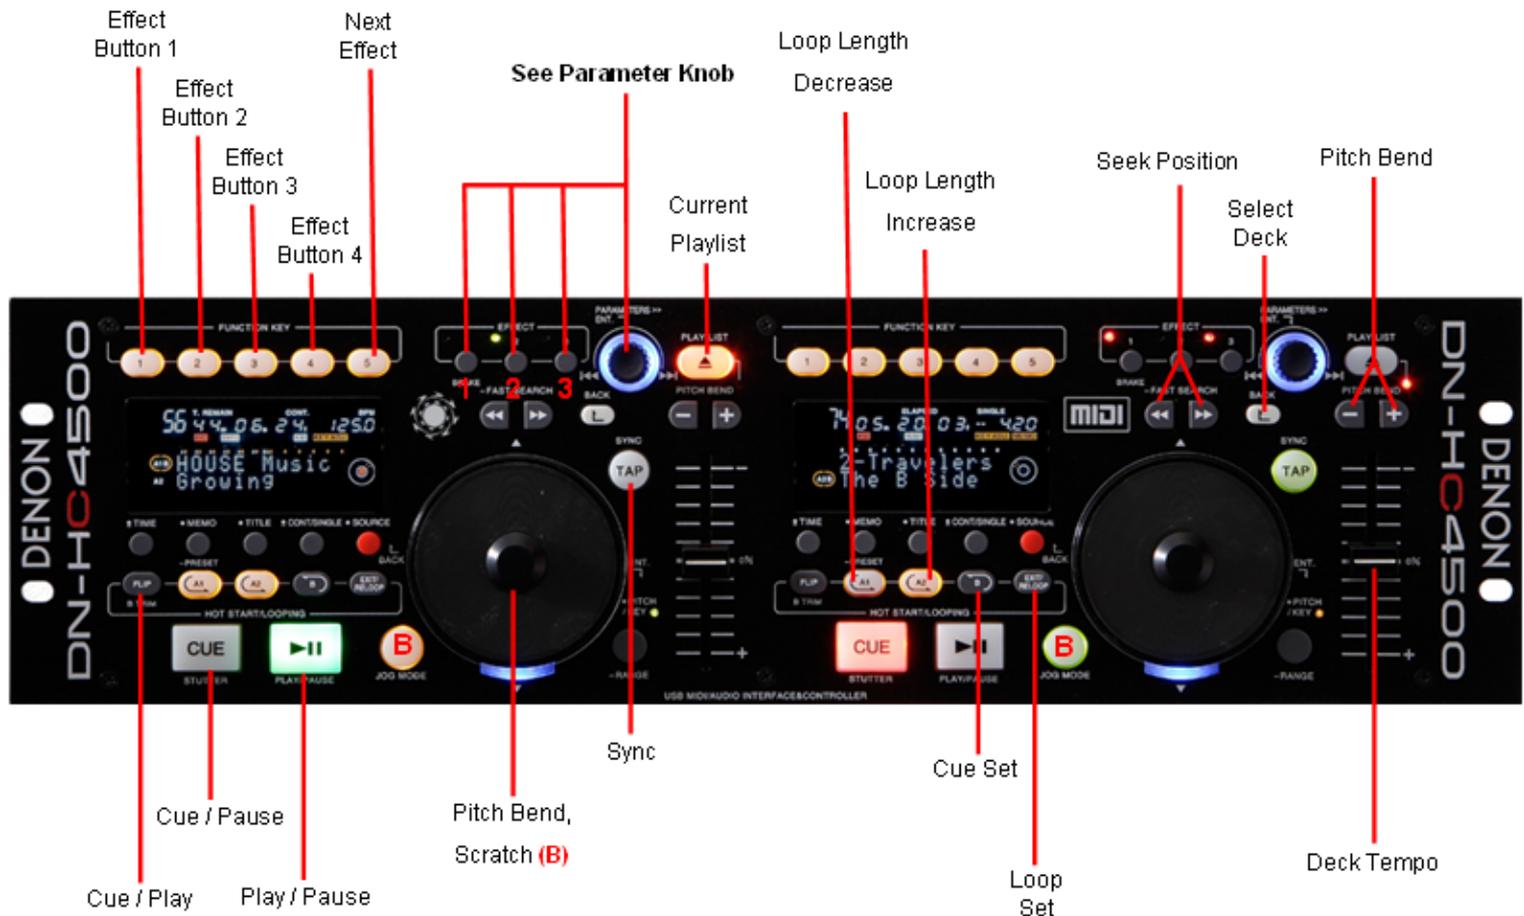

Parameter Knob

Action	Effect
1 + Knob Turning	Low Adjust
2 + Knob Turning	Mid Adjust
3 + Knob Turning	High Adjust
1 + Knob Pressing	Low Cut
2 + Knob Pressing	Mid Cut
3 + Knob Pressing	High Cut
Knob Turning	Track Select
Knob Pressing	Load Track