


© AUDIO 4 DJ

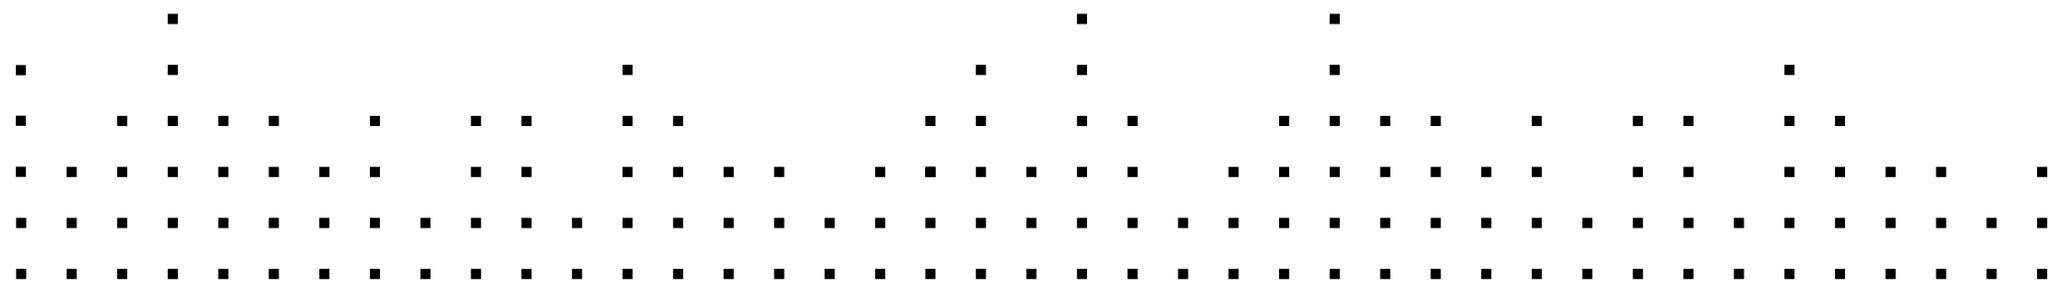

GETTING STARTED



The information in this document is subject to change without notice and does not represent a commitment on the part of Native Instruments GmbH. The software described by this document is subject to a License Agreement and may not be copied to other media. No part of this publication may be copied, reproduced or otherwise transmitted or recorded, for any purpose, without prior written permission by Native Instruments GmbH, hereinafter referred to as Native Instruments. All product and company names are [™] or ® trademarks of their respective owners.

Users Guide written by André Benedix

Version: 1.0 (10/2008)

Special thanks to the Beta Test Team, who were invaluable not just in tracking down bugs, but in making this a better product.

Germany

NATIVE INSTRUMENTS GmbH

Schlesische Str. 28

D-10997 Berlin

Germany

info@native-instruments.de

www.native-instruments.de

USA

NATIVE INSTRUMENTS North America, Inc.

5631 Hollywood Boulevard

Los Angeles, CA 90028

USA

sales@native-instruments.com

www.native-instruments.com

MASSIVE was designed and developed entirely by Native Instruments GmbH. Solely the name Massive is a registered trademark of Massive Audio Inc, USA.



© Native Instruments GmbH, 2008. All rights reserved.

1. Driver Installation

Please do not connect the AUDIO 4 DJ to your computer until the installer asks you to do so.


This chapter provides a step-by-step guide explaining how to install the required drivers and software, which are needed for using the AUDIO 4 DJ.

1.1 Installing the AUDIO 4 DJ Driver on Windows XP and Windows Vista


1. Place the installation CD-ROM in your computer's CD/DVD-ROM drive.
2. Use the Windows Explorer to browse the content of the CD.
3. Double-click the installer file named "AUDIO 4 DJ Driver Setup".




4. Click "Next."

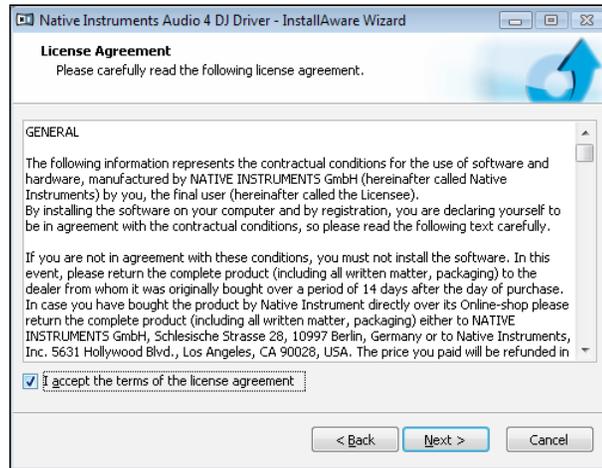


5. To continue, you need to accept the license agreement first. After you have read the license agreement, check the according checkbox and click “Next.”

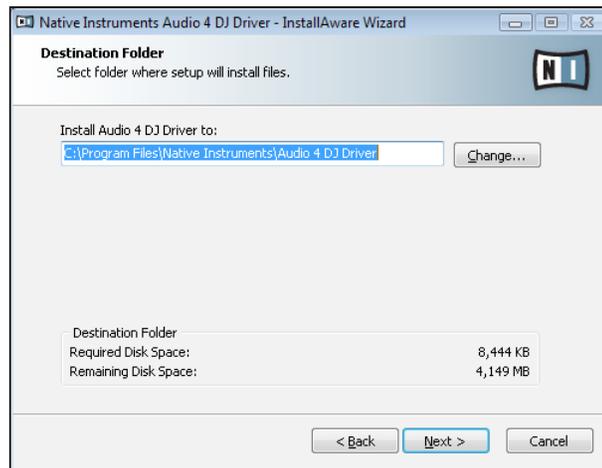


6. In the next dialog, choose the destination folder for the driver installation. To use the default path, just click “Next.” If you wish to select a custom path, click “Change”, browse to the folder where you want to install the Audio 4 DJ Driver and click “Next.”

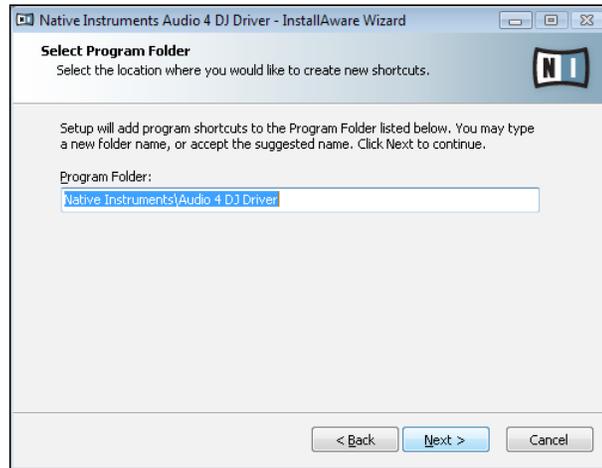


7. Now select the folder in the Windows Start dialog to place the AUDIO 4 DJ Driver Setup. To use the default path, just click “Next.” To set a custom folder, type in a name for it, then click “Next.”

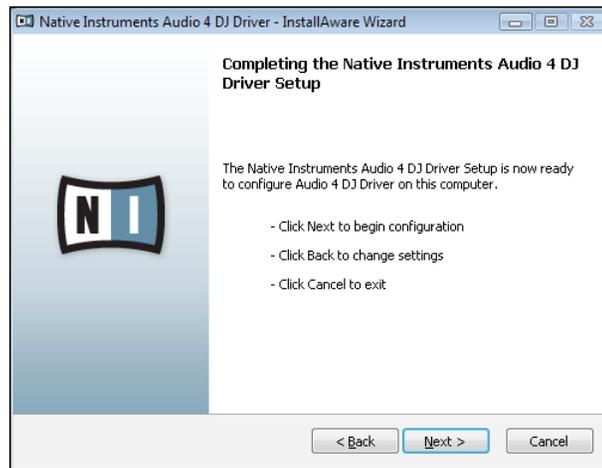

8. On the next dialog page, the Install Wizard will prompt you to start the installation by clicking “Next.” To return to the previous dialog page, click “Back.” To abort the installation procedure, click “Cancel.”

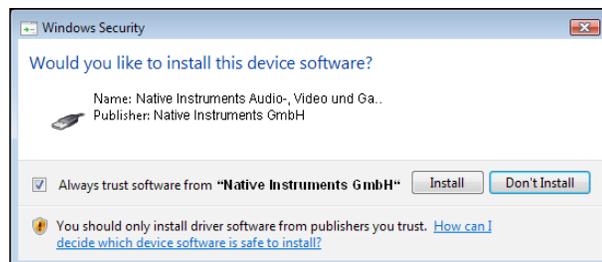

9. During the driver installation, a screen will appear with a message that the driver has not passed Windows Logo Testing; this does not indicate a problem, simply click on “Continue Anyway” to proceed with the installation.
10. After the TRAKTOR installer has finished running, please connect the AUDIO 4 DJ to any available USB port on your computer.

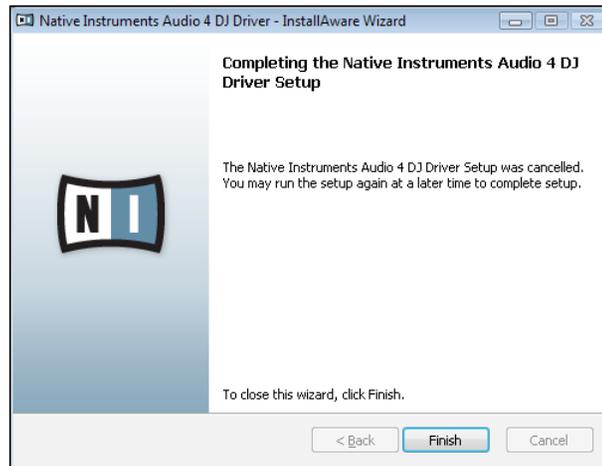


11. After the installation has been performed successfully, click “Finish.”
12. After the TRAKTOR installer has finished running, please connect the AUDIO 4 DJ to any available USB port on your computer, using the USB cable included in delivery. Windows will identify the AUDIO 4 DJ and begin the final installation process. Choose “No” if Windows asks you to search the Internet for a driver. Please note that as multiple driver components are installed, you will see the whole sequence of installer screens repeated twice; this is not an error, just follow along and make the appropriate choices to finish the installation.

 You cannot install the AUDIO 8 DJ on a USB 1.1 port – a USB 2.0 port is required.


1.2 Installing the AUDIO 4 DJ Driver on Mac OS X

1. Place the installation CD-ROM in your computer’s CD/DVD-ROM drive. Its icon will appear in the Mac OS X Finder.
2. Double-click the “AUDIO 4 DJ” CD icon to display the content of the CD.
3. Double-click the installer file.

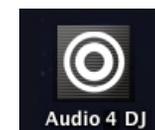




4. In the appearing dialog click “Continue” to proceed.

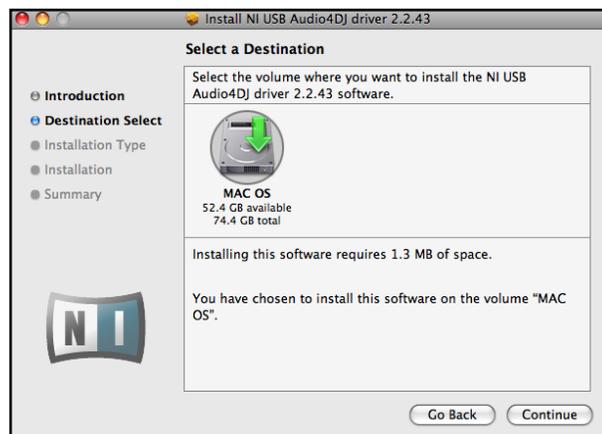


5. Select a destination volume and proceed by clicking “Continue.”

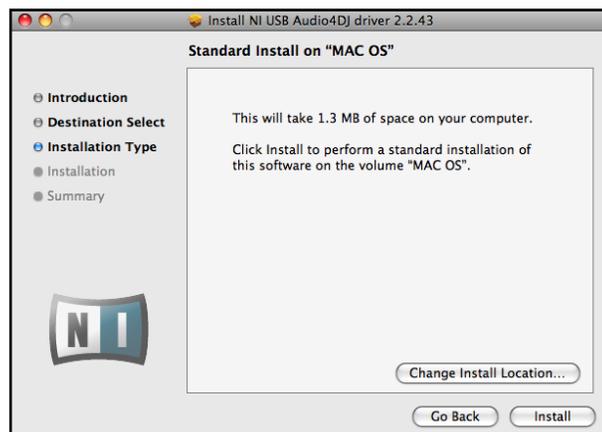

6. Click “Install” to install the driver in the default path or browse to select a custom installation path by clicking “Change Install Location” and then click “Install.”



7. The next screen informs you that your computer needs to be restarted when the installation is done. If you have any other applications running, you should close them now. To continue, click “Continue Installation.”

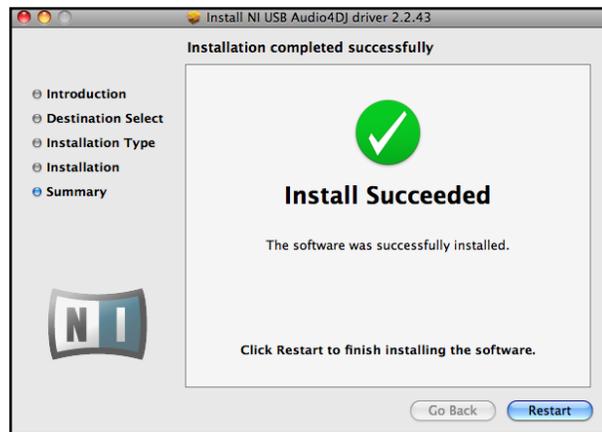

8. After a successful installation you will be prompted to restart your Mac. Click “Restart” to restart your computer.
9. After restarting your computer, connect the AUDIO 4 DJ to a free USB 2.0 port of your Mac, using the USB cable included in delivery.

 You cannot install the AUDIO 8 DJ on a USB 1.1 port – a USB 2.0 port is required.

2. The AUDIO 4 DJ Hardware

In this chapter you will learn about the AUDIO 4 DJ's controls and connectors. We will refer to some of the terms introduced here later on, so please use the information provided in the following sections as a reference.

2.1 Front Panel




1 - Headphone Volume

Use this knob to adjust the level of the Headphone Output. The Headphone Output is connected to the output channel B.

2 - Headphone Output

Connect your headphones to this ¼" socket.

2.2 Rear Panel

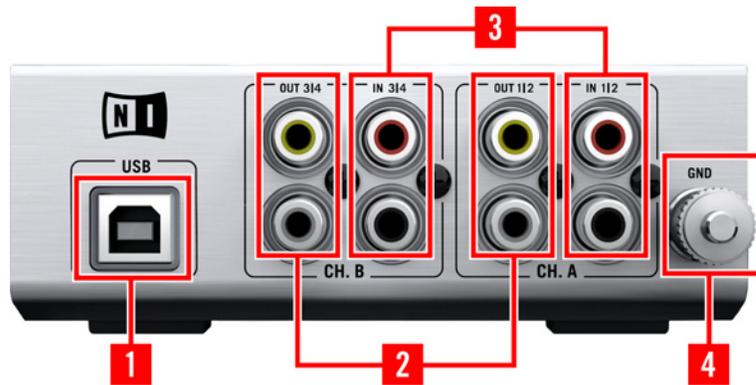

1 - USB 2.0 Port

Connects the AUDIO 4 DJ to your computer. The USB 2.0 connection handles data transmission and provides bus power to your AUDIO 4 DJ. This means you do not need an external power supply.

2 - Inputs A & B

You can configure these inputs as 2 stereo pairs of input channels.


3 - Outputs A & B

You can configure these inputs as 2 stereo pairs of output channels.

4 - Ground Screw

Attach your turntable's grounding wire to this screw to eliminate hum induced by ground loops from the audio signal.

2.3 Status LEDs

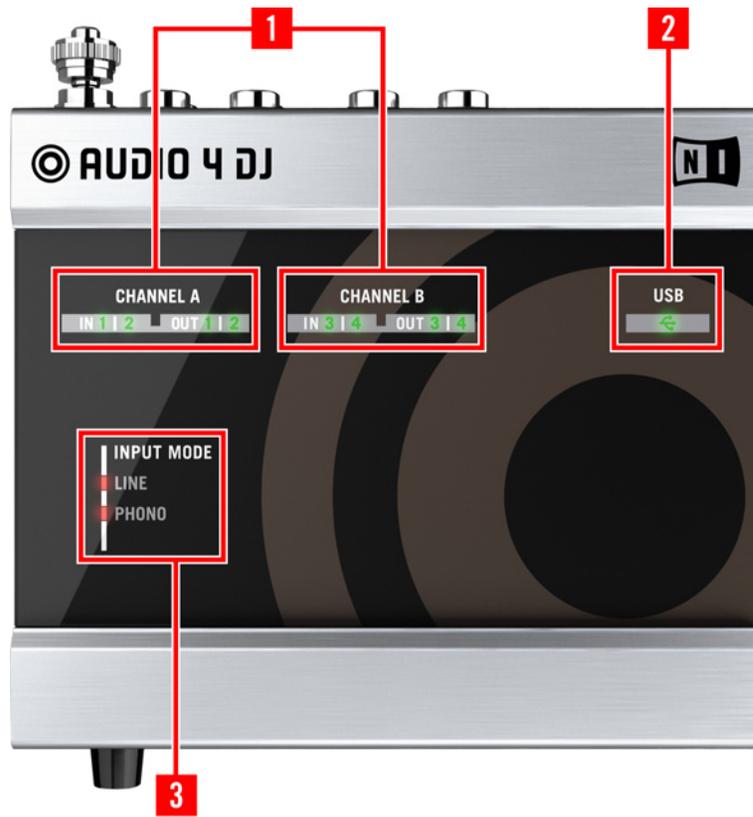

1 - CHANNEL A and CHANNEL B:

These LEDs provide information about the AUDIO 4 DJ's audio inputs and outputs: they light up green to indicate that an audio signal is present. If the input signal is too loud and causes clipping, the LEDs turn red.

2 - USB:

When the AUDIO 4 DJ is connected, this LED lights up green. If the USB status LED remains black although the AUDIO 4 DJ is connected to your computer, please refer to the "USB Troubleshooting" section in the AUDIO 4 DJ User Manual.

3 - INPUT MODE (Channel A and Channel B):

Colored LEDs help you identify the Input Mode currently selected.

Use the AUDIO 4 DJ Settings Tool to select an Input Mode, as explained in chapter 3, and thus adapt the AUDIO 4 DJ's inputs to your line-level or phono devices.


3. The Settings Tool

This chapter provides an overview of the AUDIO 4 DJ Settings Tool, which displays the status of the device as well as its and for general configuration.

3.1 Open the Settings Tool

- ▶ On Mac OS X, double-click on Applications > Audio 4 DJ Driver > Settings Tool to open the Settings Tool.
- ▶ On Windows, select Start > All Programs > Native Instruments > Audio 4 DJ Driver > Settings Tool to open the Settings Tool.

3.2 Understanding the Settings Tool

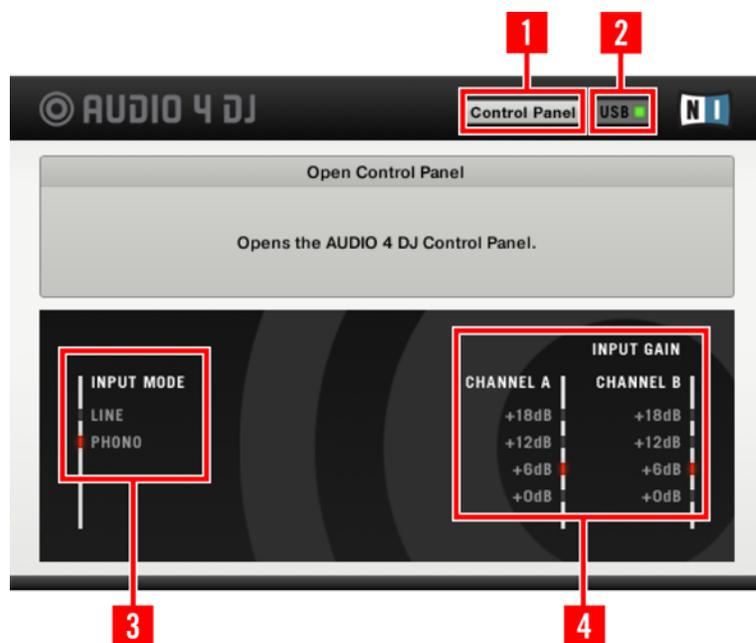

1 - Control Panel

Click on the CONTROL PANEL BUTTON to open the Control Panel. The Control Panel is explained in detail in the AUDIO 4 DJ User's Manual.

2 - USB Connection Monitor

This status LED displays whether the AUDIO 4 DJ is connected to your computer or not. The USB Connection Monitor LED is black (switched off) if the AUDIO 4 DJ is not connected to your computer.

The USB Connection Monitor LED is lit green if the AUDIO 4 DJ is connected to your computer.

3 - Input Mode Selector

The INPUT MODE SELECTOR selects the mode for the input channels A and B.

Line: Select this if your setup utilizes line-level audio sources like CD/DVD players, keyboards, a mixer or other computer audio interfaces.

Phono: Choose this mode for use with a turntable.

4 - Input Gain Selector

This controls the input levels of the Phono Input Mode. It is not available in Line Mode!



To change any settings, the AUDIO 4 DJ must be connected to your computer via USB 2.0.

4. Using the AUDIO 4 DJ: Example Setups

This chapter describes the most common use cases for the AUDIO 4 DJ. Your personal setup may differ from what is shown here, but you should easily be able to customize this information to suit your needs.


4.1 Using the AUDIO 4 DJ with TRAKTOR

In the following sections you will learn how to set up and use the AUDIO 4 DJ for DJing with the NATIVE INSTRUMENTS' TRAKTOR product line. Please note that we will refer to all products from the TRAKTOR product line simply as TRAKTOR, because the functions described here are identical in all TRAKTOR products.

4.1.1 Simple TRAKTOR Setup

Physical Setup

1. Connect the output pair 1/2 (Ch. A) of the AUDIO 4 DJ to your amplifier or powered speakers.
2. Connect your headphones to the Headphones Output on the AUDIO 4 DJ.

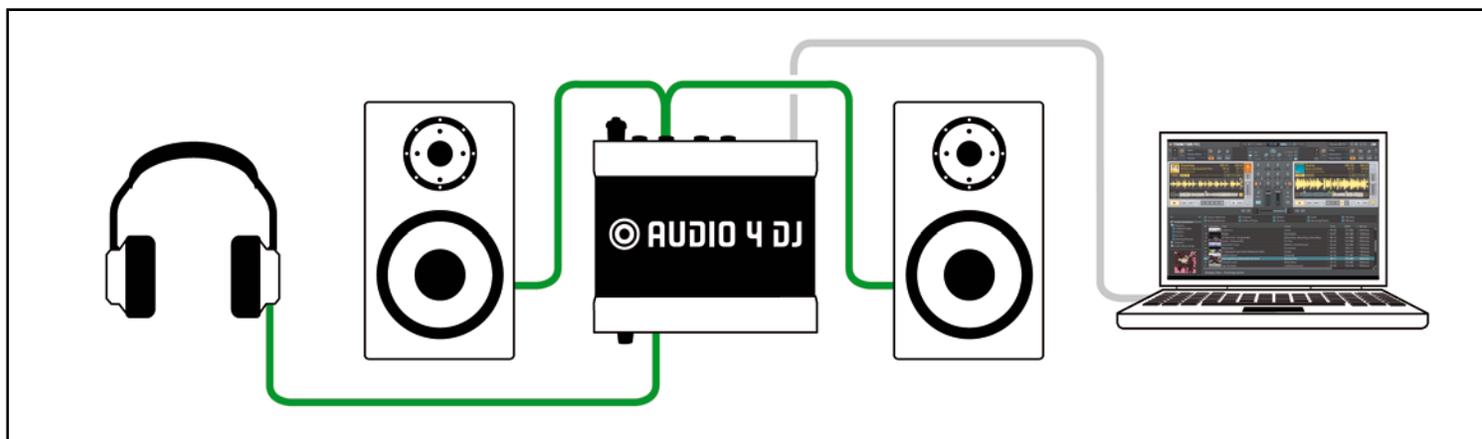

To use the AUDIO 4 DJ for laptop DJing, connect the devices as pictured in the above diagram.

Software Setup

1. Open TRAKTOR.
2. Open *Preferences > Audio Setup > Audio Setup*.
3. From the *AUDIO DEVICE* list, select the *AUDIO 4 DJ* entry.
4. Now open *Preferences > Audio Setup > Output Routing*.
5. Choose *Internal Mixing Mode*.
6. Choose a channel pair 3/4 for the *Output Monitor* for pre-listening the Tracks.
7. Choose a channel pair 1/2 (Ch. A) for the *Output Master*.
8. Close the Preferences.
9. Adjust the headphones volume inside TRAKTOR with the *VOL KNOB* in the Master Panel and on the AUDIO 4 DJ front with the Headphone Volume knob to a comfortable level.



The AUDIO 4 DJ has to be set to Line Mode for use in this setup.

Test the Setup

1. From TRAKTOR's list window, drag tracks in both decks and hit the *PLAY/PAUSE* *BUTTONS*.
2. Drag the *CROSSFADER* all the way to the left (Deck A). Click on the *CUE* *BUTTON* in the Mixer Strip of Deck B. You should hear the track playing on Deck B only in your headphones, while the track in Deck A is playing over your speakers.


4.1.2 Extended TRAKTOR Setup

Physical Setup

1. Connect the outputs of the AUDIO 4 DJ to the mixer inputs. Each stereo output channel of the AUDIO 4 DJ connects to one of the stereo channel inputs of the mixer. Use RCA cables for the connections.
2. Connect your headphones to the mixer.
3. Connect the mixer's outputs to the inputs of the amplifier system driving your speakers (or to your pair of active monitor speakers, respectively).



With the AUDIO 4 DJ you can use 2 Decks in TRAKTORs External Mode.

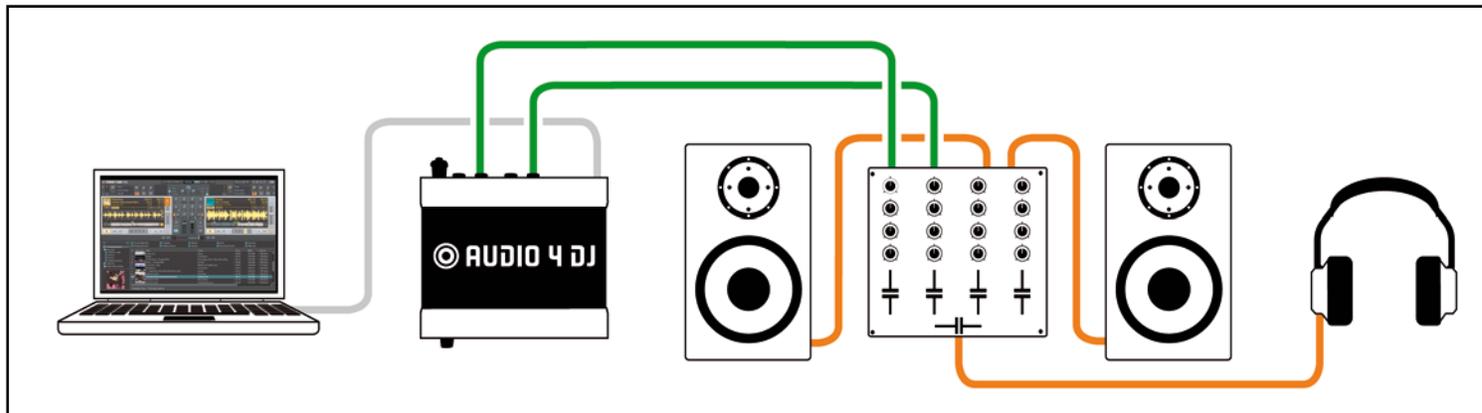

To add a mixer to your DJ setup, connect the devices as pictured in the above diagram.

Software Setup

1. Open TRAKTOR.
2. Open *Preferences > Audio Setup > Audio Setup*.
3. Drop down the *Audio Device* list to select the AUDIO 4 DJ.
4. Now open *Preferences > Audio Setup > Output Routing*.
5. Choose *External Mixing Mode*.
6. For *Out Channel A*, choose an output pair from the dropdown menu, e.g. Out 1 and Out 2.
7. For *Out Channel B*, choose another output pair from the dropdown menu, e.g. Out 3 and Out 4.

Test the Setup

1. From the list window, drag tracks in both decks and hit the **PLAY/PAUSE BUTTON**.
2. Drag the crossfader of your DJ mixer all the way to the left (Deck A or Channel 1).
3. Set the headphones mix knob/fader of your DJ mixer to 0%. If you do not find a headphones mix knob/fader, please consult the manual of your DJ mixer.
4. Use the cue button/switch/fader of Deck B (Channel 2) of your DJ mixer. If you do not find a cue button/switch/fader, please consult the manual of your hardware mixer. You should hear the track playing on Deck B only in your headphones, while the track in Deck A plays over your speakers.

4.2 Using the AUDIO 4 DJ as Default Device for Recording

You can use the AUDIO 4 DJ as a recording device for recording from vinyl as well as for capturing your own musical performance.

4.2.1 Using the AUDIO 4 DJ as Recording Device on Windows


1. Open *Start > Control Panel > Sounds & Audio Devices*.
2. Click the “Audio” tab.
3. Set the AUDIO 4 DJ as your “Default Device for Sound Recording” by selecting the AUDIO 4 DJ’s channel pair you want to record from, e.g. AUDIO 4 DJ (CH. A, In 1/2).
4. In your recording software’s Options dialog, choose the appropriate input.
5. Adjust the input level in your recording software and start recording.

4.2.2 Using the AUDIO 4 DJ as Recording Device on Mac OS X

1. Open *Applications/Utilities/Audio MIDI Setup*.
2. On the “Audio Devices” page, choose AUDIO 4 DJ as “Default Input”.
3. Adjust the input level in your recording software and start recording.

4.3 Recording Audio from a Line-Level Source

The following setup guide uses a CD player as an example for devices using the AUDIO 4 DJ's Line Input Mode. The same applies if you want to connect a hardware synthesizer, a drum machine or another device that outputs a line-level signal.

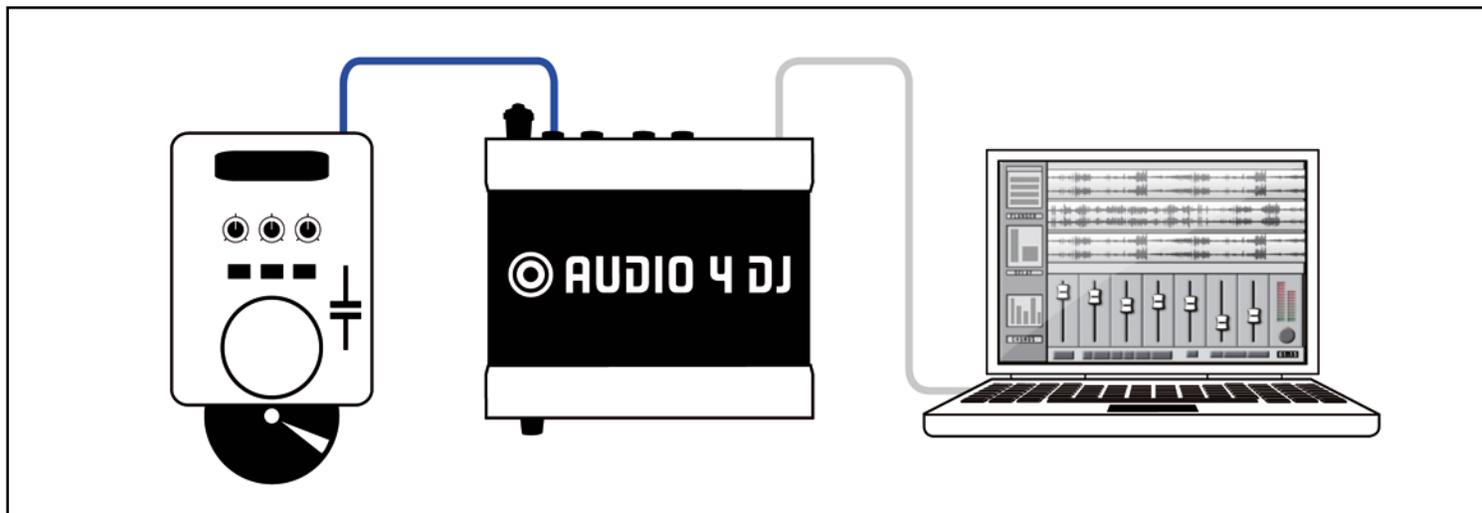


To record audio from an external CD player, connect the devices as pictured in the above diagram.

1. Make sure the volume controls of the amplifier are turned down completely!
2. In the AUDIO 4 DJ Settings Tool's Input Mode Selector, select *Line*.
3. Use a RCA cable to connect your CD player's audio outputs to a free input pair of the AUDIO 4 DJ, e.g. AUDIO 4 DJ (CH. A, In 1/2).
4. Put a CD in your CD-Player and start playing it.




4.4 Using the AUDIO 4 DJ with a Turntable

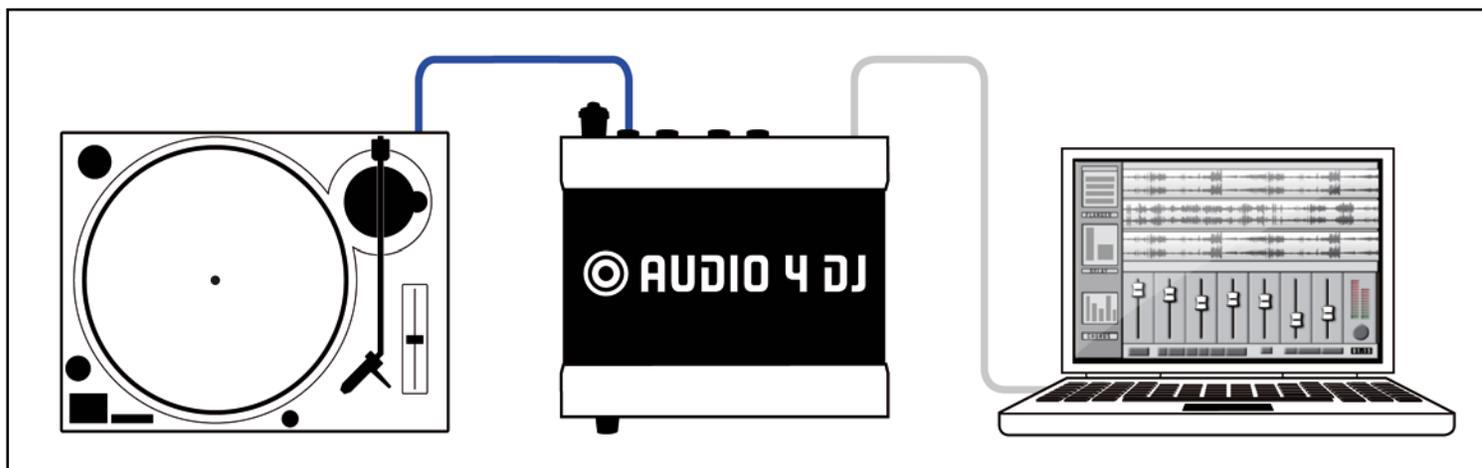

To record audio from a turntable, connect the devices as pictured in the above diagram.

1. Make sure the volume controls of the amplifier are turned down completely!
2. In the AUDIO 4 DJ Settings Tool's Input Mode Selector, select *Phono*.
3. Connect the RCA cable of your turntable to the input pair of channel A or B of the AUDIO 4 DJ, e.g. AUDIO 4 DJ (CH. A, In 1/2).
4. Attach the grounding wire of your turntable to the AUDIO 4 DJ's ground screw.
5. Put a record on your turntable and start playing it.

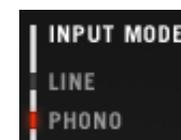

This way you can also use the AUDIO 4 DJ for digitizing your vinyl.