



**MEGASTACK**  
SPECIAL AMPLIFICATION SYSTEM  
**MG15FXMSDM**

DAVE  
MUSTAINE  
MEGASTACK

MG15FXMSDM  
SPECIAL FORCES  
CUSTOM VOICE BANK  
BLOOD TYPE: METAL

**Marshall**

AMPLIFICATION

OWNERS MANUAL

UNLESS YOU ARE JUST VISITING THIS PLANET, WHEN YOU THINK ABOUT A MARSHALL STACK, YOU THINK ABOUT A **MENACING MARSHALL** AMPLIFIER ON TOP OF TWO MARSHALL CABINETS, AND THEN MULTIPLY THIS CONFIGURATION HOWEVER MANY TIMES UNTIL YOU HAVE THE "BACKLINE OF THE GODS" LIKE I DO! NOT EVERYONE CAN HAVE MARSHALL STACKS, BUT LET ME TELL YOU, THERE IS A NEW MARSHALL IN TOWN!! I WOULD LIKE TO INTRODUCE TO YOU THE NEWEST MARSHALL STACK, THE **MEGASTACK!** AND THIS LITTLE STACK CAN KICK STACKS OF ASS!!

I WISH I COULD JAM WITH YOU AND SHOW YOU HOW TO PROGRAM THE SOUNDS, BUT THAT ISN'T NECESSARY BECAUSE IT IS SO EASY.

MY ENGINEERS WORKED INTENSIVELY WITH DR. JIM MARSHALL'S

DEVELOPMENT TEAM AND CREATED MY FOUR MAIN GUITAR SOUNDS AS THE FOUR DEFAULT TONE PATCHES AND WE HAVE ALSO HIDDEN FOUR ADDITIONAL TONES IN THE AMPS MEMORY. I HAVE DUPLICATED THE MAIN SOUNDS OF MY TOURING RIG, FOR A TOTAL OF EIGHT: 2 CLEAN, 3 RHYTHM, 3 LEAD SOLOS. THESE TONE PATCHES WILL ALMOST PERFECTLY DELIVER SOLO SOUNDS TO PERFORM ANY MEGADETH SONG.

IN CLOSING, AS YOU WAIT FOR THE POLICE TO COME VISIT YOU FOR DISTURBING THE PEACE AND PLAY ALONG WITH YOUR NEW MEGASTACK TO MY NEW RECORD "ENDGAME" JUST REMEMBER... IT AIN'T HOW BIG YER PENCIL IS... IT'S HOW YOU WRITE YER NAME!"

*Dave Mustaine*



# Marshall

## AMPLIFICATION

ENGLISH

### From Jim Marshall

Every so often I get the chance to work with some of the world's most revered guitarists. Artists who have created groundbreaking work, toured every corner of the globe and inspired a whole new generation to pick up a guitar. No-one fits this profile better than Megadeth frontman Dave Mustaine and it gives me great pleasure to present his very own signature MG Microstack – the MG15FXMSDM or Megastack for short. Like the man himself this solid-state amplifier demanded the best possible analogue tone whilst taking advantage of new and exciting digital control. With this premise firmly in mind, my experienced design team set about the task of creating a Megastack fit for purpose, incorporating 4 channels, digital FX and programmable features. Finished in the same distinctive style as the 1960DM Signature Dave Mustaine speaker cabinets, the MG15FXMSDM makes for a menacing microstack indeed.

Like all the amplifiers in the new MG range, state-of-the-art manufacturing and stringent quality control procedures ensure that the Megastack meets the high standard of build you have come to expect from all Marshall products.

Whether this is your first ever Marshall, or is the latest weapon in your arsenal of amps, the tone, flexibility and feel of this compact and rugged unit is guaranteed to deliver the goods.

I wish you every success with your new Dave Mustaine Megastack. Welcome to the family...

 
Yours Sincerely,

*Dr. Jim Marshall OBE*

Dr. Jim Marshall OBE



# MG15FXMSDM FRONT PANEL

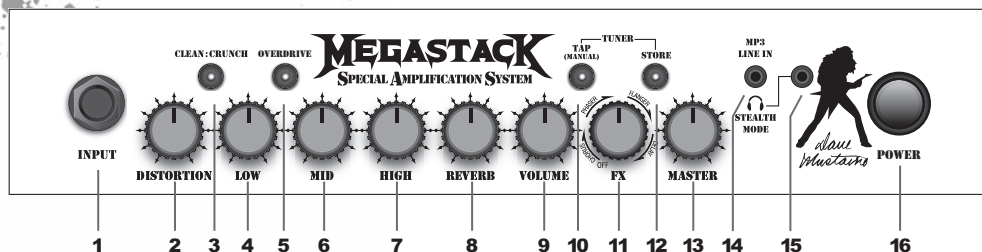

## 1. INPUT JACK SOCKET

Jack input for your guitar. Use a good quality guitar cable (i.e. one that's screened/shielded) to help prevent noise, interference and unwanted feedback.

## 2. DISTORTION CONTROL

Controls the amount of signal entering the pre-amp and the amount of distortion created in the selected channel.

## 3. CLEAN : CRUNCH SWITCH

Selects between Clean (green) and Crunch (red) channels.

## 4. LOW CONTROL

Turning up the Low control will add warmth and low-end depth to your sound.

## 5. OD SWITCH

Selects between OD1 (green) and OD2 (red) channels.

## 6. MID CONTROL

Adjusting the middle frequencies will vary the amount of body in your sound.

## 7. HIGH CONTROL

Increasing the High will make your sounds brighter and more cutting, turning it down will decrease your tone's edge and make it sound softer as a result.

## 8. REVERB CONTROL

This control lets you add a lush reverb to the selected channel, from a subtle hint to cavernous and all points in-between.

## 9. VOLUME CONTROL

Controls the volume of the selected channel.

## 10. TAP (MANUAL) SWITCH

Matches the delay FX time to the time between two pushes. The LED flashes at the selected delay time. Holding down the Tap switch for longer than 2 seconds switches the amp between manual and preset mode. When using the optional footcontroller, holding both the Tap switch and the Store switch (12) will activate the tuner.

## 11. FX CONTROL

Selects and adjusts one of four effects - Chorus, Phaser, Flanger & Delay.

## 12. STORE SWITCH

Stores the current amp settings into the current channel or into the optional footcontroller. When in manual mode the Store button lights red.

## 13. MASTER CONTROL

Controls the master volume of the amplifier.

## 14. MP3 LINE IN SOCKET

Jam to your favourite MP3, CD or tape track by connecting the line out or headphone output of your player here. Adjust the volume of your player to match that of your guitar and you've got the perfect 'play-along' practice system.

## 15. HEADPHONE SOCKET (STEALTH MODE)

For use when silent practice is the order of the day. Connection of Stealth Mode will automatically mute the internal speaker.

## 16. POWER SWITCH

The power switch turns your amplifier on and off. A channel switch will light up when your amplifier is turned on.

**Note:** The specific mains input voltage rating that your amplifier has been built for is shown on the back panel. Before connecting to the mains electricity supply, always ensure that your amplifier is compatible with your electricity supply. If you have any doubt, please get advice from a qualified technician. Your Marshall dealer will help you in this respect.

Please ensure the amplifier is switched off and unplugged from the mains electricity supply before being moved.

# MG15FXMSDM FEATURES

## CHANNEL SELECTION

The amplifier has 4 channels - Clean, Crunch, OD1 & OD2. The MG15FXMSDM features four factory preset channels programmed by Dave Mustaine and Andy Sneap. Details of the individual control and voice settings can be found on page 40.

## FACTORY PRESETS

Clean Absolution  
Symphony Chorus  
New Wave of British Heavy Metal  
Holy Solo

Pressing the Clean/Crunch switch (3) selects between the Clean (Green Light) and Crunch (Red Light) channels.

Pressing the OD switch (5) selects between the OD1 (Green Light) and OD2 (Red Light) channels.

When moving from an OD channel to a Clean/Crunch channel, the unit remembers the last channel you were in before leaving. E.g. If you have moved from the Crunch Channel to an OD channel and you press the Clean/Crunch switch (3), the amplifier will revert back to the Crunch channel - rather than starting again in the Clean channel.

## MODES

The amplifier operates in two modes - Preset and Manual.

To change between these two modes, you must hold the Tap switch (10) down for at least two seconds. When in manual mode the Store switch (12) lights red and the selected channel light (3 or 5) will start to flash.

The amplifier will remember the last mode it was in after power off and revert to it the next time it is powered on.

## PRESET

This is the factory default operation of the amplifier.

In Preset mode the position of all controls except Master Volume (13) are stored within each channel. Each channel should be considered a preset.

Selecting a channel automatically recalls the settings stored within the channel. Note: The physical position of the front panel controls, except Master Volume (13) which is not storable, will now not match the actual settings of the amplifier. All front panel switches will automatically update.

Altering a control will cause the associated parameter to jump to the current physical position of that control.

When a control is altered the selected channel light (3 or 5) will start to flash indicating that the current preset has been altered.

To store the updated settings, push the Store switch (12).

If you select another channel without pressing Store (12) then any altered settings will be lost as the new channel and its settings are recalled.

## MANUAL

In manual mode the amp's settings always match the physical positions of the controls.

Changing channel only changes the channel, NO presets are recalled, NO other controls are altered.

Pressing Store (12) will store the current settings into the selected channel. These can then be recalled when using the unit in Preset mode. When channel settings have been stored the current channel light (3 or 5) will stop flashing indicating the preset has been saved.

## REVERB & FX

The amplifier provides two simultaneous effects, Reverb and one of four FXs (Chorus, Phaser, Flanger or Delay)

## REVERB

The Reverb control (8) sets the amount of signal sent to the reverb section - allowing the reverb to spill between channels as different presets are recalled. When the Reverb control (8) is set to '0' the reverb is switched off, the status of the reverb is also indicated on the optional footcontroller.

## FX

The FX control is split into four segments and selects the type of FX and adjusts its associated settings. When the FX control is set to '0' the FX are switched off, the status of the FX is also indicated on the optional footcontroller.

0	FX Off
Chorus	Speed increases and depth is reduced as knob is turned clockwise.
Phaser	Speed increases as knob is turned clockwise.
Flanger	Speed increases, feedback and depth are reduced as knob is turned clockwise.
Delay	Delay level is increased as knob turned clockwise.

## TAP TEMPO

The Tap Tempo switch (10) is used for the Delay effect only.

The Tap Tempo switch matches the delay time to the time between two presses.

The Tap Tempo LED flashes red at the selected/recalled delay time.

The number of repeats is reduced as the delay time decreases.

If you change from a channel with delay to one without delay the effect will spill between channels.

If you change from a channel with delay to a channel with delay set to a different delay time the delay effect will not spill between channels.



# MG15FXMSDM FEATURES

## MP3 / LINE IN

The 3.5mm MP3 / Line In socket (14) allows the connection of an external audio source e.g. MP3 or CD player.

## HEADPHONES

The 3.5mm Headphones socket (15) allows the connection of a pair of headphones. When a jack is inserted into the headphones socket the unit's speaker is muted.

## POWER

The Power switch (16) turns the amplifier on and off. If current settings have not been stored they will be lost. **Restoring Settings - WARNING ALL AMP & FOOTCONTROLLER SETTINGS WILL BE LOST**  
To restore the unit to Dave's factory settings (see page 40) you must hold the Store switch (12) while powering on the unit. The Clean/Crunch (3) and OD (5) lights will light orange. You can then release the Store switch (12).

Resetting the amplifier will erase all user Channel presets and all user footcontroller settings, replacing them with the factory presets.

# MG15FXMSDM REAR PANEL



## 1. FOOTCONTROLLER SOCKET


Jack socket for the connection of the optional footcontroller.

## 2. LOUDSPEAKER OUTPUTS

Connect the two loudspeaker cabinets provided to the speaker outputs using the speaker leads supplied.

If you would like to use your MG15HFX amplifier head with another speaker system (such as a full size 4x12" cabinet), ensure that the amplifier is provided with a total load equal to or greater than 8 ohms.

Always use a non-screened Marshall approved speaker lead when connecting an extension cabinet to these units.

**\* EUROPE ONLY**  - **Note:** This equipment has been tested and found to comply with the requirements of the EMC Directive (Environments E1, E2 and E3 EN 55103-1/2) and the Low Voltage Directive in the E.U.  
**\* EUROPE ONLY - Note:** The Peak Inrush current for the MG15HFX is 2.5 amps.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and the receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

**Follow all instructions and heed all warnings  
KEEP THESE INSTRUCTIONS !**

# FOOTCONTROLLER (OPTIONAL - PEDL-90008)



## 1. FOOTSWITCHES

In addition to the factory preset tones, when the optional stompsware® footcontroller is plugged into the amplifier an additional four voices will be "unlocked" from the amplifier memory. These voices were programmed by Dave Mustaine and Andy Sneap and details of the control settings and voice parameters can be found on page 41. Each footswitch can be assigned a different stored function.

## 2. LED STATUS PANEL

This always reflects the current status of the amplifier or tuner details:

- CLN & OD:** Current Channel
- REV:** Reverb On/Off
- FX:** FX Section On / Off
- Ext FX:** External FX Loop On/Off (MG50FX & MG100FX)
- Damp:** Damping Mode (MG50FX & MG100FX)
- Tap:** Tap Tempo speed.

## 3. DIGITAL DISPLAY

This display indicates the various functions of the footcontroller.



## FOOTCONTROLLER FACTORY SETTINGS

- Footswitch 1: Wish You Were Clean
- Footswitch 2: Mega Rhythm
- Footswitch 3: Conjuring Solo
- Footswitch 4: Hangar Solo

## PROGRAMMING

The footcontroller can be programmed to store front panel switches (Switch Store) or complete presets (Preset Store).

## SWITCH STORE

**To assign a front panel switch to a footswitch (1),** press and hold the front panel switch and while held down press the footswitch (1) you wish to assign it to.

The Digital Display (3) will swirl to show that the footswitch has been assigned. You can then release the footswitch and front panel switch.

## PRESET STORE

**To assign a preset to a footswitch (1),** select the required channel and modify the front panel controls if required, press and hold the Store switch on the front panel and while held down, press your chosen footswitch (1).

The Digital Display (3) will swirl to show that the footswitch has been assigned. You can then release the footswitch and Store switch.

Footcontroller Presets are independent of the dedicated channel presets stored within the amplifier. This allows you to create a number of presets based on the same channel/pre-amp setting.

ENGLISH

## FOOTCONTROLLER (OPTIONAL - PEDL-90003)

When either a Channel preset or Footswitch preset has been altered, the Digital Display (3) will begin to flash. The footcontroller will flash the relevant number if a Footswitch preset has been altered or will flash a “-” if a Channel preset has been altered.

Pressing only the Store switch at this point will overwrite the altered Channel or Footswitch preset.

**To store an altered Channel preset to the Footswitch instead,** hold the Store switch and while held down, press your chosen Footswitch (1) - Just like a normal Preset Store.

**To store an altered Footswitch Preset to another Footswitch** hold the Store switch and while held down, press your chosen Footswitch (1) - Just like a normal Preset Store.

### DIGITAL DISPLAY

When recalling a footswitch preset, the Digital Display (3) will indicate which footswitch number has been pressed.

If a Channel preset has been recalled the Digital Display (3) will remain blank.

When either a Channel preset or Footswitch preset has been altered the Digital Display (3) will begin to flash. The footswitch will flash the relevant number if a Footswitch preset has been altered or will flash a “-” if a Channel preset has been altered.

### TUNER

The Tuner can be accessed in two ways:

By simultaneously pushing the Tap (10) and Store (12) switches on the front panel or by assigning the Tuner to the footswitch.

Assigning the Tuner to a footswitch is carried out like any other Switch Store. To assign the Tuner to the footswitch hold down the Tap (10) and Store (12) switches and press the chosen footswitch you wish to assign it to. The Digital Display (3) will swirl to show that the footswitch has been assigned. You can then release the footswitch and front panel switch.

For all amplifiers, when entering Tuner mode the unit mutes and Clean : Crunch (3) and OD (5) switches light yellow.

The Digital Display (3) indicates the closest current note being played. The indicator dot on the lower right hand corner shows if the current closest note is #.

The LED Status Panel (2) is used to show how far away from the closest note the current note being played is. When the central FX Status LED lights, it indicates the correct tuning, with the others progressively indicating the tuning is up to 50 cents up or down.

To exit the Tuner push any footswitch, the amplifier will then exit returning to the settings before entering.

 


## Megastack Presets

"I've always used an exciting solo tone patch consisting of a lead boost, some chorus, and some delay, and I switch between Chorus to Phaser or Flanger. You will notice that these tone patches will almost perfectly deliver solo sounds to perform any Megadeth song."


*Dave Mustaine*

### Clean Absolution

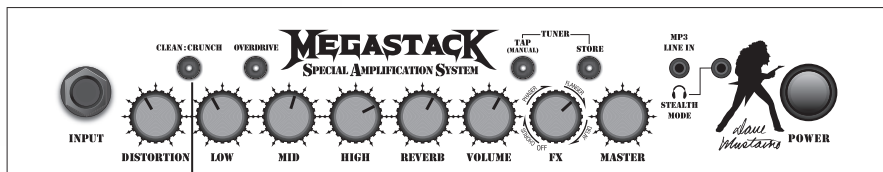


green

### Symphony Chorus

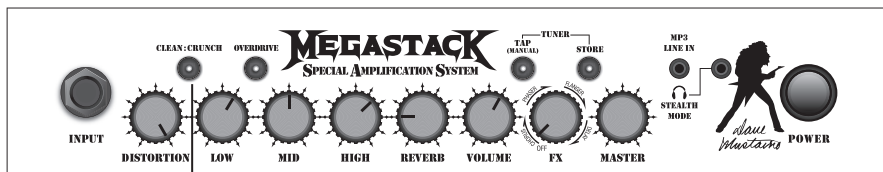 


red

### New Wave of British Heavy Metal

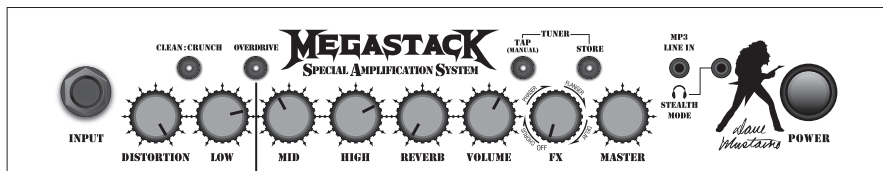 

green

### Holy Solo

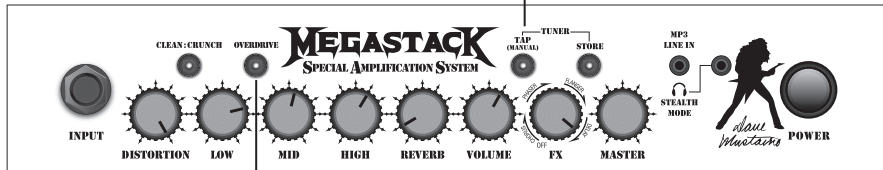 


red

## Stompware® Presets

 
Footcontroller PEDL-90008 available from you Marshall dealer.

### Wish You Were Clean

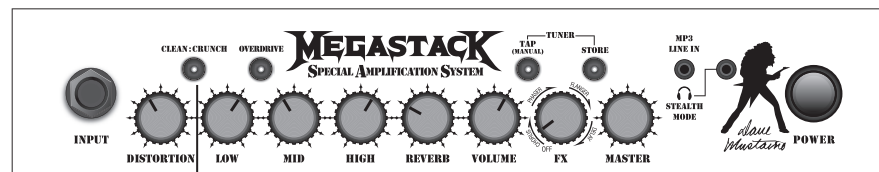


green

### Mega Rhythm

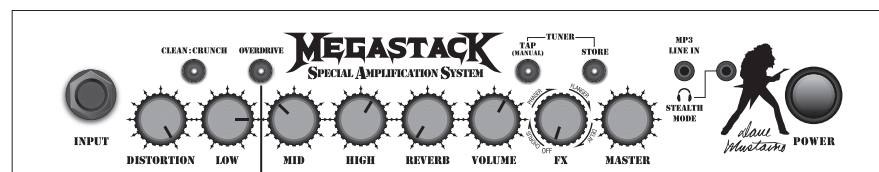 


red

### Conjuring Solo

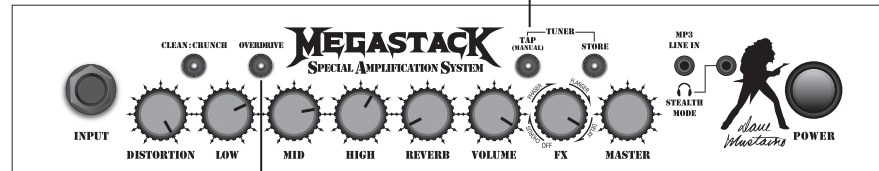 

red

### Hangar Solo

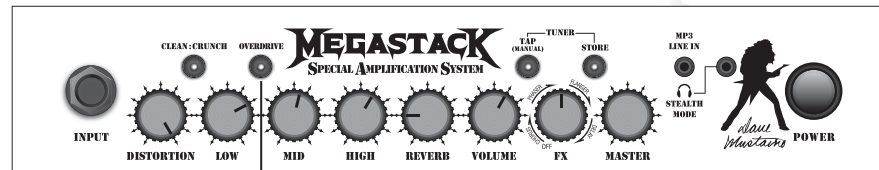 

red

# *Marshall*

**AMPLIFICATION**

Denbigh Road, Bletchley, Milton Keynes MK1 1DQ, England.  
Tel : +44 (0)1908 375411 Fax : +44 (0)1908 376118  
[www.marshallamps.com](http://www.marshallamps.com)

Whilst the information contained herein is correct at the time of publication, due to our policy of constant improvement and development, Marshall Amplification plc reserve the right to alter specifications without prior notice.

BOOK-91001