




STARVILLE

MH-X60th LED Spot moving head

Musikhaus Thomann e.K.

Treppendorf 30

96138 Burgebrach

Germany

Telephone: +49 (0) 9546 9223-0

E-mail: info@thomann.de

Internet: www.thomann.de

21.01.2014, ID: 322408

Table of contents

1	General information	5
	1.1 Further information.....	6
	1.2 Notational conventions.....	7
	1.3 Symbols and signal words.....	8
2	Safety instructions	11
3	Features	16
4	Installation	18
5	Starting up	22
6	Connections and operating elements	25
7	Operating	28
	7.1 Starting the device.....	28
	7.2 Main menu.....	29
	7.3 Settings menu.....	37
	7.4 Gobos.....	42
	7.5 Functions in 8-channel DMX mode.....	43

	7.6 Functions in 14-channel DMX mode.....	48
8	Technical specifications.....	56
9	Plug and connection assignments.....	57
10	Troubleshooting.....	58
11	Cleaning.....	60
12	Protecting the environment.....	61

1 General information

This manual contains important instructions for the safe operation of the unit. Read and follow the safety instructions and all other instructions. Keep the manual for future reference. Make sure that it is available to all those using the device. If you sell the unit please make sure that the buyer also receives this manual.

Our products are subject to a process of continuous development. Thus, they are subject to change.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.

Displays

Texts and values displayed on the device are marked by quotation marks and italics.

Examples: *'24ch'*, *'OFF'*.


Text input

Text inputs that are carried out on the device are indicated by typewriter font.

Example: 2323

Cross-references




References to other locations in this manual are identified by an arrow and the specified page number. In the electronic version of the manual, you can click the cross-reference to jump to the specified location.

Example: See  'Cross-references' on page 7.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.

Warning signs	Type of danger
 A yellow triangular warning sign with a black border and a black lightning bolt symbol in the center, indicating high voltage.	Warning – high-voltage.
 A yellow triangular warning sign with a black border and a black symbol of a person standing next to a suspended load, indicating a suspended load.	Warning – suspended load.
 A yellow triangular warning sign with a black border and a black exclamation mark in the center, indicating a general danger zone.	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended to be used as moving-head spotlight. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers.

There are no user-serviceable parts inside.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



WARNING!

Eye damage caused by high light intensity

Never look directly into the light source.



WARNING!

Risk of epileptic shock

Strobe lighting can trigger seizures in photosensitive epilepsy. Sensitive persons should avoid looking at strobe lights.



CAUTION!

Risk of injury due to movements of the device

The head of the device can move quickly (pan, tilt) and can produce very bright light. This is also valid immediately after you turn on the device, when the device operates in automatic mode or under remote control and when you turn off a DMX controller that is connected to the device. Persons staying near the device could be injured or frightened.

Before you turn on the device and during the operation, always ensure that nobody stays close to the device. If work has to be performed in the area of movement or in the near vicinity of the device, it must remain turned off.



NOTICE!

Risk of fire

Do not cover the device nor any ventilation slots. Do not place the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.



NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user.

Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

3 Features

The moving head is particularly suitable for professional lighting tasks, for example at events, on rock stages, in theatres and musicals or in discotheques.

Special features of the device:

- Two movable axles with 8 or 16 bit resolution:
 - Inclination (tilt, 270 °)
 - Rotation (pan, 540 °)
- Control via DMX (8 or 14 channels) and via buttons and display on the unit
- 8 preprogrammed automatic shows
- Sound control
- Master / Slave mode
- Colour wheel with white, 8 full-colours, 8 split-colours and rainbow effect
- Gobo wheel with 7 rotatable Gobos
- Gobo shake function
- Effects wheel with triple prism
- Electronic dimmer
- Mechanical focus

- Shutter frequency: 0...20 Hz
- Automatic position correction

4 Installation

Unpack and carefully check that there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the device against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



WARNING!

Risk of injury by falling off

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.

The carrying capacity of the truss or other mounting must be sufficient for the intended number of devices. Note that the movement of the head may additionally stress the load-bearing structures.

**CAUTION!****Risk of injury due to movements of the device**

The head of the device can move quickly (pan, tilt) and can produce very bright light. This is also valid immediately after you turn on the device, when the device operates in automatic mode or under remote control and when you turn off a DMX controller that is connected to the device. Persons staying near the device could be injured or frightened.

Before you turn on the device and during the operation, always ensure that nobody stays close to the device. If work has to be performed in the area of movement or in the near vicinity of the device, it must remain turned off.

**NOTICE!****Risk of overheating**

Always ensure sufficient ventilation.

The ambient temperature must always be below 40 °C (104 °F).



NOTICE!

Possible damage caused by movements of the device

Always ensure that enough space is free around the device for the movements of the head (pan, tilt).



NOTICE!

Possible data transmission errors

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.



Please note that this device must not be connected to a dimmer.

Mounting options

You can install the device on the wall, ceiling or floor.


The threads on the housing bottom are used to secure the mounting bracket or truss clamps.

5 Starting up

Establish all connections as long as the unit is switched off. Use the shortest possible high-quality cables for all connections.

Connections in DMX mode

Connect the DMX input of the device to the DMX output of a DMX controller or another DMX device. Connect the output of the first DMX device to the input of the second one, and so on to form a daisy chain. Always ensure that the output of the last DMX device in the daisy chain is terminated with a resistor ($110\ \Omega$, $\frac{1}{4}\text{ W}$).

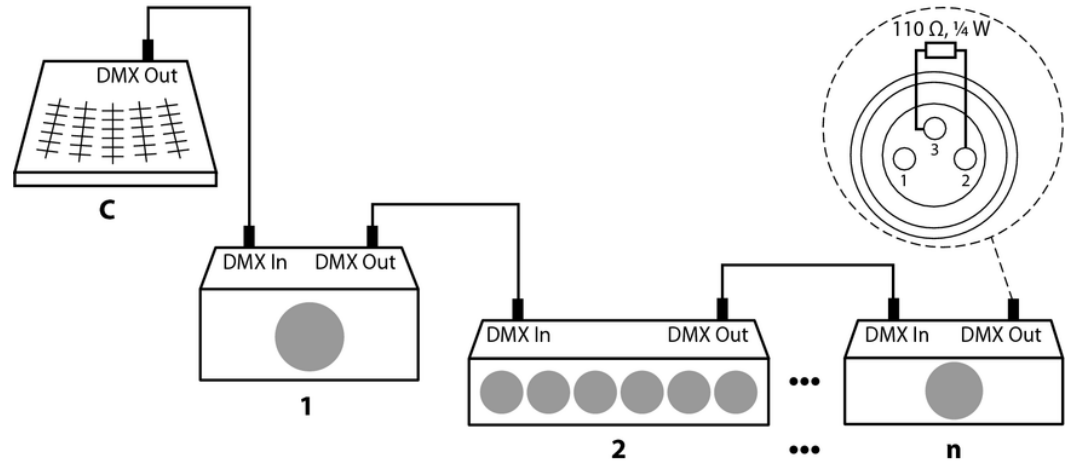


DMX indicator

If the device and the DMX controller are in operation, the DMX indicator shows an incoming DMX signal at the input.

Connections in master/slave mode

When you configure a group of devices in master/slave mode, the first unit will control the other units for an automatic, sound-activated, synchronized show. This function is ideal when you want to start a show immediately. Connect the DMX output of the master device to the DMX input of the first slave device. Then connect the DMX output of the first slave device to the DMX input of the second slave device and so on.

6 Connections and operating elements

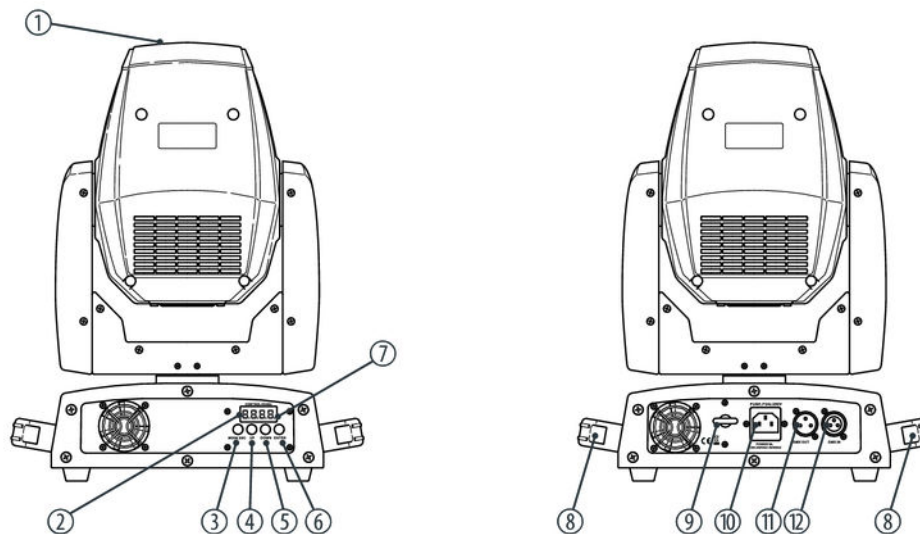

MH-X60th LED Spot

1	Light aperture with projection lens.
2	Display.
3	Button [<i>MODE ESC</i>] Activates the main and the settings menu and toggles between menu items. Closes an open submenu without saving any changes.
4	Button [<i>UP</i>] Increases the displayed value by one.
5	Button [<i>DOWN</i>] Decreases the displayed value by one.
6	Button [<i>ENTER</i>] Selects an option of the respective operating mode, confirms the set value.
7	DMX indicator.
8	Carrying handles.

9	Safety eye.
10	IEC chassis connector for the power cable with fuse holder. Below, the range of the allowable input voltage is specified.
11	<i>[DMX OUT]</i> DMX output.
12	<i>[DMX IN]</i> DMX input.

7 Operating

7.1 Starting the device



CAUTION!

Risk of injury due to movements of the device

The head of the device can move quickly (pan, tilt) and can produce very bright light. This is also valid immediately after you turn on the device, when the device operates in automatic mode or under remote control and when you turn off a DMX controller that is connected to the device. Persons staying near the device could be injured or frightened.

Before you turn on the device and during the operation, always ensure that nobody stays close to the device. If work has to be performed in the area of movement or in the near vicinity of the device, it must remain turned off.

Connect the device to the power supply to start operation. After a few seconds, the fans start to work, the head moves to the home positions for rotation (pan) and inclination (tilt). After a few more seconds, the display shows 'dxxx'. Now the device is then ready for use.

7.2 Main menu

Press *[MODE ESC]* to activate the main menu. Press *[MODE ESC]* again to select a menu item.

Use *[UP]* and *[DOWN]* to change the respectively displayed value. When the display shows the desired value, press *[ENTER]*. To return to the main menu without any changes, either press *[MODE ESC]* or wait 10 seconds.

If you don't press any button for about one minute the display turns off. A short press on *[MODE ESC]* will then turn it back on.

All previous settings are retained even when you switch the device off and disconnect it from the mains. To restart with default values, use the function 'Load default' (↶ 'Loading default values' on page 35).

DMX address

Press *[MODE ESC]* repeatedly until the display shows 'dxxx'. Now you can set the number of the first DMX channel to be used by the device (DMX address). Use *[UP]* and *[DOWN]* to select a value between 1 and 512.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Make sure that this number matches the configuration of your DMX controller. The following table shows the highest possible DMX address for the various DMX modes

Mode	Highest possible DMX address
8 channels	505
14 channels	499

Operating mode 'Auto-Show'

Press *[MODE ESC]* repeatedly until the display shows 'NASL'. Now use *[UP]* and *[DOWN]* to select one of the preprogrammed shows. Press *[ENTER]* to start operation in the selected mode.

Display when the menu is open	Display after confirmation with <i>[ENTER]</i>	Operating mode
NASL	'SLoU'	Auto show type 1 (slow), in stand-alone mode or as master in master / slave operation
NAFA	'FASt'	Auto show type 2 (fast), in stand-alone mode or as master in master / slave operation

Display when the menu is open	Display after confirmation with <i>[ENTER]</i>	Operating mode
NSt5	'Srun'	Sound-controlled show in stand-alone mode or as master in master / slave operation
SLAv	'Son'	The device operates as slave and follows the sequences of the master

Pan inversion

Press *[MODE ESC]* repeatedly until the display shows 'PAN'. Now use *[UP]* and *[DOWN]* to toggle between 'rPAN' (reverse sense of rotation) and 'PAN' (normal sense of rotation).

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Tilt inversion

Press *[MODE ESC]* repeatedly until the display shows 'tit'. Now use *[UP]* and *[DOWN]* to toggle between 'rtit' (reverse sense of inclination) and 'tit' (normal sense of inclination).

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Display reversal

Press *[MODE ESC]* repeatedly until the display shows 'dis'. Now use *[UP]* and *[DOWN]* to toggle between 'rdis' (text appears in the display upside down) and 'dis' (text appears in the display normal).

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Operating mode 'DMX'

Press *[MODE ESC]* repeatedly until the display shows 'xxCH'. Now use *[UP]* and *[DOWN]* to select one of the following DMX operating modes: 14-channel (display shows '14CH') or 8-channel (display shows '8CH'). This setting is only relevant if the device is controlled via DMX.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Pan area

Press *[MODE ESC]* repeatedly until the display shows 'PAxx'. Now use *[UP]* and *[DOWN]* to determine the Pan area. Select between 'PA54' (Pan area = 540°), 'PA36' (Pan area = 360°) and 'PA18' (Pan area = 180°).

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Tilt area

Press *[MODE ESC]* repeatedly until the display shows 'tixx'. Now use *[UP]* and *[DOWN]* to determine the Tilt area. Select between 'ti27' (Tilt area = 270°), 'ti18' (Tilt area = 180°) and 'ti9' (Tilt area = 90°).

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Temperature display

Press *[MODE ESC]* repeatedly until the display shows 'tCxx'. The last two digits in the display show the temperature of the device in degrees Celsius.

To close the temperature display, press *[MODE ESC]*.


System reset

Press *[MODE ESC]* repeatedly until the display shows 'rEst'. Press *[ENTER]* to reset the servo motors for the moving axles, the gobo and colour wheels to their home positions (mechanical reset).

Loading default values

Press *[MODE ESC]* repeatedly until the display shows 'LoAd'. Press *[ENTER]* to reset all values to their factory default settings.

Overview (main menu)

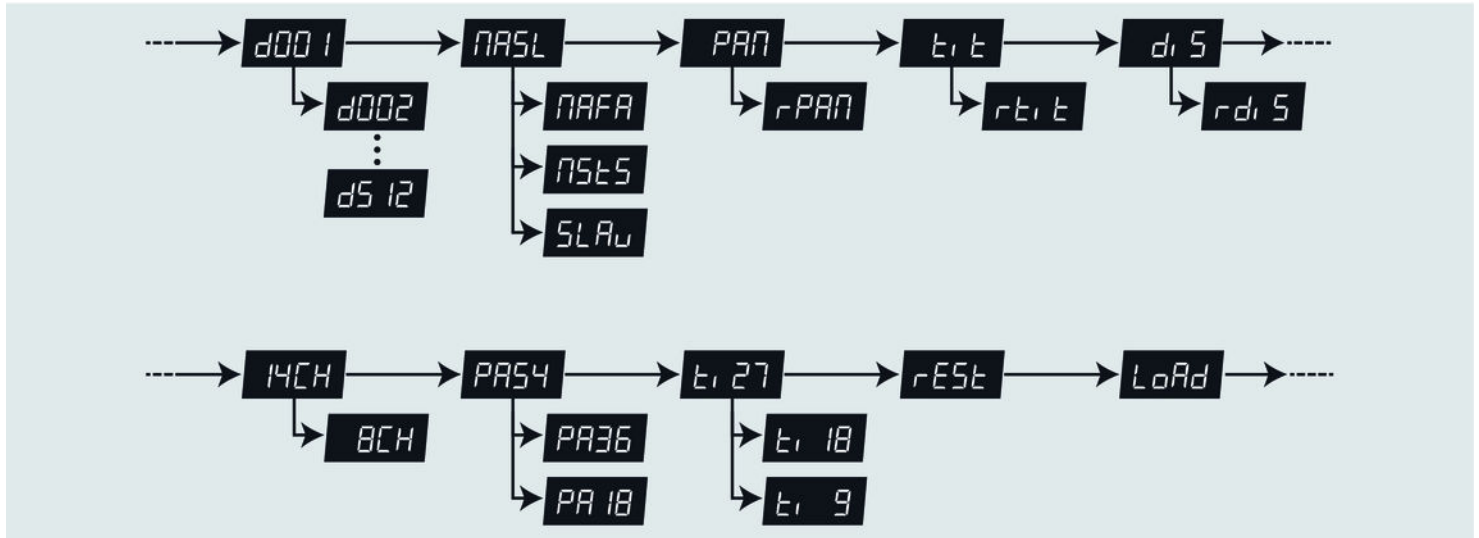

7.3 Settings menu

Keep *[MODE ESC]* pressed for about five seconds to activate the settings menu. Use *[UP]* or *[DOWN]* to enter the unit's password 2323 . The *[UP]* button changes the number at the cursor position, the *[DOWN]* button moves the cursor to the next position. Press *[ENTER]* when all digits have been entered.

To exit the settings menu and return to the main menu, keep *[MODE ESC]* pressed for about five seconds.

All previous settings are retained even when you disconnect the device from the mains.



There is no reset function available for those values that can be changed in the settings menu.

Rotation preset (pan offset)

Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'Pxxx'. Use the buttons *[UP]* or *[DOWN]* to adjust a value between 0 and 255, until the head is in the desired home position.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Inclination preset (tilt offset)

Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'txxx'. Use the buttons *[UP]* or *[DOWN]* to adjust a value between 0 and 255, until the head is in the desired home position.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Gobo wheel preset

Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'Gxxx'. Use the buttons *[UP]* or *[DOWN]* to adjust a value between 0 and 255, until the Gobo wheel is in the desired home position.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Gobo rotation preset

Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'rxxx'. Use the buttons *[UP]* or *[DOWN]* to adjust a value between 0 and 255, until the Gobo wheel is in the desired rotation position.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Colour wheel preset

Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'Cxxx'. Use the buttons *[UP]* or *[DOWN]* to adjust a value between 0 and 255, until the Colour wheel is in the desired home position.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Prism (alignment)

Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'Lxxx'. Use the buttons *[UP]* or *[DOWN]* to adjust the desired home position.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Focus preset

Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'Fxxx'. Use the buttons *[UP]* or *[DOWN]* to adjust the desired home position.


When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Brightness preset


Activate the settings menu. Press *[MODE ESC]* repeatedly until the display shows 'dxxx'. Use the buttons *[UP]* or *[DOWN]* to adjust the desired initial brightness.

When the display shows the desired value, press *[ENTER]* to confirm the setting and then *[MODE ESC]* to proceed to the next menu item. To change the menu item without making changes, press *[MODE ESC]* or wait ten seconds.

Overview (settings menu)

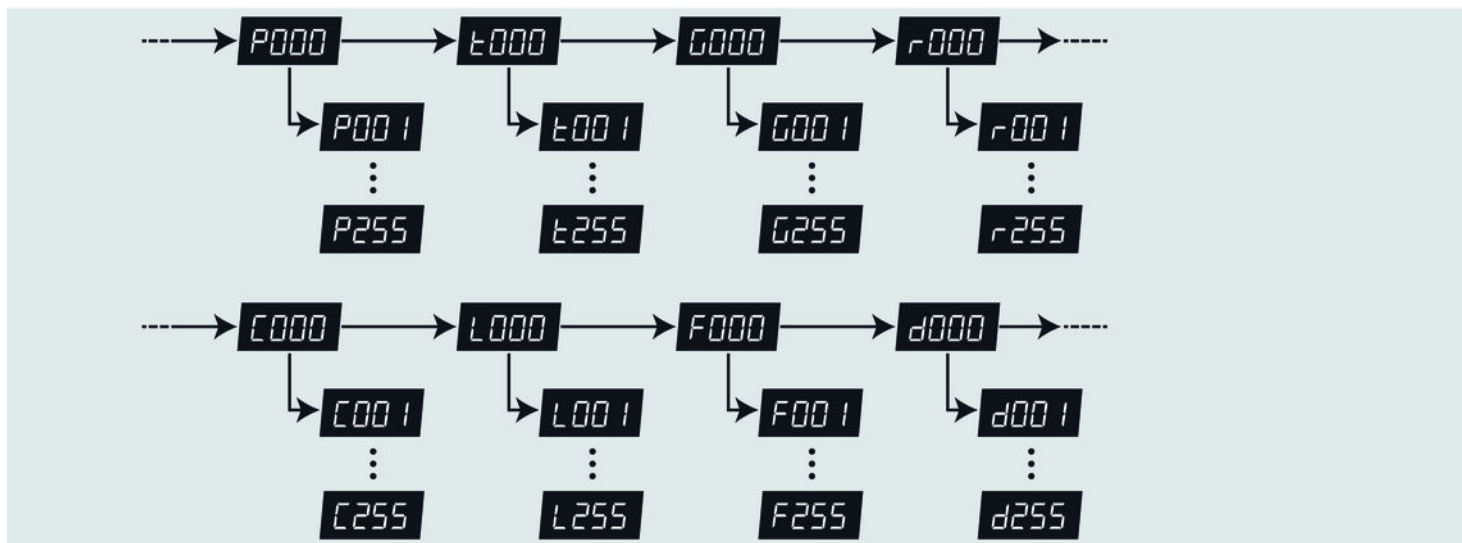

7.4 Gobos

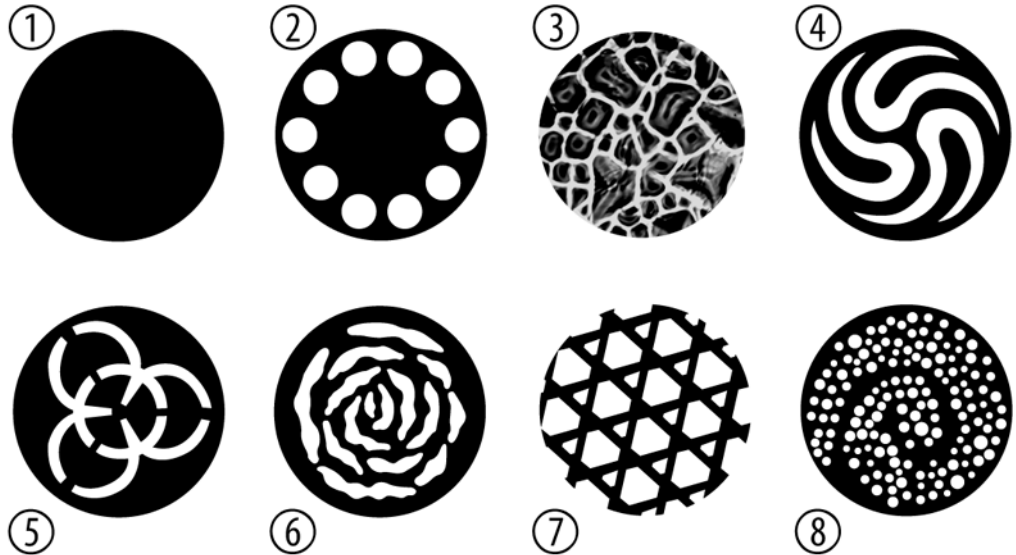

7.5 Functions in 8-channel DMX mode

Channel	Value	Function
1	0...255	Rotation (0° up to the maximum value of the Pan area: 180°, 270° or 540°)
2	0...255	Inclination (0° up to the maximum value of the Tilt area: 90°, 180° or 270°)
3	Colour wheel	
	0...6	White
	7...13	Yellow
	14...20	Pink
	21...27	Green
	28...34	Peachblow
	35...41	Blue
	42...48	Kelly-green
	49...55	Red

Channel	Value	Function
	56...63	Dark blue
	64...70	White + yellow
	71...77	Yellow + pink
	78...84	Pink + green
	85...91	Green + peachblow
	92...98	Peachblow + blue
	99...105	Blue + kelly-green
	106...112	Kelly-green + red
	113...119	Red + dark blue
	120...127	Dark blue + white
	128...191	Rainbow effect in positive sense of rotation, increasing speed
192...255	Rainbow effect in negative sense of rotation, increasing speed	
4	Shutter	

Channel	Value	Function
	0...3	Closed (blackout)
	4...7	Open
	8...76	Strobe light, increasing speed
	77...145	Triple strobe, increasing speed
	146...215	Random strobe light, increasing speed
	246...255	Open
5	Gobo wheel	
	0...7	Open
	8...15	Gobo 2
	16...23	Gobo 3
	24...31	Gobo 4
	32...39	Gobo 5
	40...47	Gobo 6

Channel	Value	Function
	48...55	Gobo 7
	56...63	Gobo 8
	64...71	Gobo 8 shake, increasing speed
	72...79	Gobo 7 shake, increasing speed
	80...87	Gobo 6 shake, increasing speed
	88...95	Gobo 5 shake, increasing speed
	96...103	Gobo 4 shake, increasing speed
	104...111	Gobo 3 shake, increasing speed
	112...119	Gobo 2 shake, increasing speed
	120...127	Open
	128...191	Rotation of the gobo wheel counterclockwise, increasing speed
192...255	Rotation of the gobo wheel clockwise, increasing speed	
6	Gobo rotation	

Channel	Value	Function
	0...63	Gobo fixed
	64...147	Gobo rotation clockwise, increasing speed
	148...231	Gobo rotation counterclockwise, increasing speed
	232...255	Gobo bouncing
7	Prism	
	0...7	White
	8...12	Static prism
	13...130	Clockwise rotating prism, increasing speed
	131...247	Counterclockwise rotating prism, increasing speed
	248...255	Static prism
8	0...255	Sharpness

7.6 Functions in 14-channel DMX mode

Channel	Value	Function
1	0...255	Rotation (0° up to the maximum value of the Pan area: 180°, 270° or 540°)
2	0...255	Inclination (0° up to the maximum value of the Tilt area: 90°, 180° or 270°)
3	0...255	Fine adjustment rotation (pan)
4	0...255	Fine adjustment inclination (tilt)
5	0...255	Response speed
6	Colour wheel	
	0...6	White
	7...13	Yellow
	14...20	Pink
	21...27	Green
	28...34	Peachblow

Channel	Value	Function
	35...41	Blue
	42...48	Kelly-green
	49...55	Red
	56...63	Dark blue
	64...70	White + yellow
	71...77	Yellow + pink
	78...84	Pink + green
	85...91	Green + peachblow
	92...98	Peachblow + blue
	99...105	Blue + kelly-green
	106...112	Kelly-green + red
	113...119	Red + dark blue
	120...127	Dark blue + white

Channel	Value	Function
	128...191	Rainbow effect in positive sense of direction, increasing speed
	192...255	Rainbow effect in negative sense of direction, increasing speed
7	Shutter	
	0...3	Closed (blackout)
	4...7	Open
	8...76	Strobe light, increasing speed
	77...145	Triple strobe, increasing speed
	146...215	Random strobe light, increasing speed
	246...255	Open
8	0...255	Electronic dimmer (0 % to 100 %)
9	Gobo wheel	
	0...7	Open
	8...15	Gobo 2

Channel	Value	Function
	16...23	Gobo 3
	24...31	Gobo 4
	32...39	Gobo 5
	40...47	Gobo 6
	48...55	Gobo 7
	56...63	Gobo 8
	64...71	Gobo 8 shake, increasing speed
	72...79	Gobo 7 shake, increasing speed
	80...87	Gobo 6 shake, increasing speed
	88...95	Gobo 5 shake, increasing speed
	96...103	Gobo 4 shake, increasing speed
	104...111	Gobo 3 shake, increasing speed
	112...119	Gobo 2 shake, increasing speed

Channel	Value	Function
	120...127	Open
	128...191	Rotation of the gobo wheel counterclockwise, increasing speed
	192...255	Rotation of the gobo wheel clockwise, increasing speed
10	Gobo rotation	
	0...63	Gobo fixed
	64...147	Gobo rotation clockwise, increasing speed
	148...231	Gobo rotation counterclockwise, increasing speed
	232...255	Gobo bouncing
11	Special functions	
	0...7	Unused
	8...15	Blackout during Pan or Tilt movement
	16...23	Blackout during colour wheel movement
	24...31	Blackout during Gobo wheel movement

Channel	Value	Function
	32...39	No blackout during Pan or Tilt movement and colour wheel movement
	40...47	No blackout during Pan or Tilt movement and Gobo wheel movement
	48...55	No blackout during Pan or Tilt movement, colour wheel movement and Gobo wheel movement
	56...95	Unused
	96...103	Pan reset
	104...111	Tilt reset
	112...119	Colour wheel reset
	120...127	Gobo wheel reset
	128...135	Gobo rotation reset
	136...143	Prism reset
	144...151	Sharpness reset
	152...159	All channels reset

Channel	Value	Function
	160...255	Unused
12	Built-in programmes	
	0...7	Unused
	8...23	Programme 1
	24...39	Programme 2
	40...55	Programme 3
	56...71	Programme 4
	72...87	Programme 5
	88...103	Programme 6
	104...119	Programme 7
	120...135	Programme 8
	136...151	Sound-control 1
	152...167	Sound-control 2

Channel	Value	Function
	168...183	Sound-control 3
	184...199	Sound-control 4
	200...215	Sound-control 5
	216...231	Sound-control 6
	232...247	Sound-control 7
	248...255	Sound-control 8
13	Prism	
	0...7	White
	8...12	Static prism
	13...130	Clockwise rotating prism, increasing speed
	131...247	Counterclockwise rotating prism, increasing speed
	248...255	Static prism
14	0...255	Sharpness

8 Technical specifications

Number of DMX channels	8, 14
LED	55 W
Operating supply voltage	AC 230 V ~ , 50 Hz
Power consumption	170 W
Fuse	5 mm × 20 mm, 7 A, 250 V, fast-acting
Dimensions (W × D × H), when light beam pointing upwards	325 mm × 290 mm × 435 mm
Weight	10.4 kg

9 Plug and connection assignments

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment so that a perfect light experience is guaranteed.

Please take our tips, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into a socket, the result of an incorrect connection may be a destroyed DMX controller, a short circuit or 'just' a not working light show!

DMX connections

The unit offers a 3-pin XLR socket for DMX output and a 3-pin XLR plug for DMX input. Please refer to the drawing and table below for the pin assignment of a suitable XLR plug.



Pin	Configuration
1	Ground, shielding
2	Signal inverted (DMX-, 'cold signal')
3	Signal (DMX+, 'hot signal')

10 Troubleshooting



NOTICE!

Possible data transmission errors

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

In the following we list a few common problems that may occur during operation. We give you some suggestions for easy troubleshooting:

Symptom	Remedy
The unit does not work, no light, the fan does not run	Check the mains power connection and the main fuse.
No response to the DMX controller	1. The DMX indicator should light up. If it doesn't, check DMX connectors and cables for proper connection.
	2. If the DMX indicator lights up but with no response, check the address settings and DMX polarity.
	3. Try using another DMX controller.
	4. Check whether the DMX cables lie near or adjacent to high voltage cables, which could cause damage or interference with a DMX interface circuit.

If the procedures recommended above do not succeed, please contact our Service Center. You can find the contact information at www.thomann.de.

11 Cleaning

Optical lenses

Clean the optical lenses, that are accessible from the outside, regularly in order to optimize the light output. The frequency of cleaning depends on the operating environment: wet, smoky or particularly dirty surroundings can cause more accumulation of dirt on the optics of the device.

- Clean with a soft cloth using our lamp and lens cleaner (item no. 280122).
- Always dry the parts carefully.

Fan grids

The fan grids of the device must be cleaned on a regular basis to remove dust and dirt. Before cleaning, switch off the device and disconnect AC-powered devices from the mains. Use a lint-free damp cloth for cleaning. Never use solvents or alcohol for cleaning.

12 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE). Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.



