



digital speaker management system



user manual

Musikhaus Thomann Thomann GmbH Hans-Thomann-Straße 1 96138 Burgebrach Germany Telephone: +49 (0) 9546 9223-0 E-mail: info@thomann.de Internet: www.thomann.de

15.02.2019, ID: 448459 (V2)

Table of contents

1	General information	. 4
	1.1 Further information	
	1.2 Notational conventions	
	1.3 Symbols and signal words	7
2	Safety instructions	. 9
3	Features	12
4	Installation and starting up	13
5	Connections and controls	15
6	Operating on the computer	17
7	Technical specifications	34
8	Plug and connection assignment	
9	Protecting the environment	39

th•mann

1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under <u>www.thomann.de</u>.



1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.



1.2 Notational conventions

This manual uses the following notational conventions:

LetteringsThe letterings for connectors and controls are marked by square brackets and italics.Examples: [VOLUME] control, [Mono] button.

DisplaysTexts and values displayed on the device are marked by quotation marks and italics.Examples: '24ch', 'OFF'.



Instructions

The individual steps of an instruction are numbered consecutively. The result of a step is indented and highlighted by an arrow.

Example:

- **1.** Switch on the device.
- **2.** Press [Auto].
 - \Rightarrow Automatic operation is started.
- **3.** Switch off the device.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

th•mann

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a pos- sible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – danger zone.



2 Safety instructions

Intended use

This device is intended to be used for amplification, mixing and playback of signals from musical instruments and microphones. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



NOTICE!

Risk of fire

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.

Only operate the device within the ambient conditions specified in the chapter 'Technical specifications' of this user manual. Avoid heavy temperature fluctuations and do not switch the device on immediately after it was exposed to temperature fluctuations (for example after transport at low outside temperatures).

Dust and dirt inside can damage the unit. When operated in harmful ambient conditions (dust, smoke, nicotine, fog, etc.), the unit should be maintained by qualified service personnel at regular intervals to prevent overheating and other malfunction.



3 Features

- Ultra compact 4-Channel DSP
- Inputs: 4 × 1/4" phone socket (balanced)
- Outputs: 4 × 1/4" phone socket (balanced)
- USB connection for control via PC using the supplied software
- Comprehensive setting options for optimal sound
 - Parametric Equalizer
 - Graphic Equalizer
 - High- and low-pass filters
 - Noise Gate
 - Limiter
 - Phase inversion

4 Installation and starting up


Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.




Configuration example

The figure schematically shows how the device can be controlled via a computer's USB port.

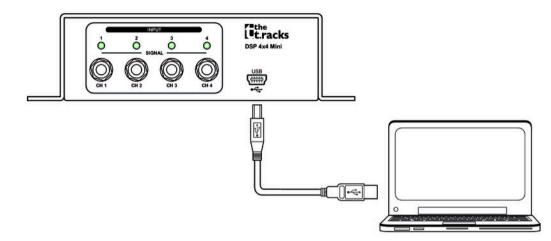



5 Connections and controls

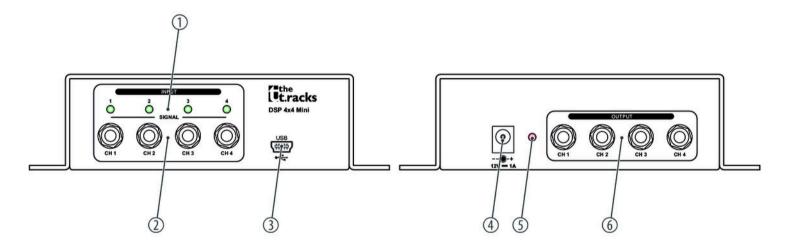



Front panel	
1	LEDs [1], [2], [3], [4]
	The LED lights up when a signal is present at the respective input.
2	Inputs [CH 1] [CH 4], designed as 1/4" phone jack (mono, balanced).
3	[USB]
	USB port
Rear pa	anel
4	Connection socket for the power adapter
5	Control LED for power supply. The LED lights up when the unit is connected to the power supply.
6	Outputs [CH 1] [CH 4], designed as 1/4" phone jack (mono, balanced).



6 Operating on the computer

Install and start the software.

- **1.** Insert the software CD into the disk drive of your Windows PC and start the installation programme that matches the device version.
- **2.** Follow the instructions of the installation programme to completion.
- **3.** Connect your PC to the device via a USB cable and turn on the device.
 - ⇒ The operating system detects the newly added USB device.
- **4.** Open the PC programme. It automatically detects the connected device.
 - \Rightarrow In the upper right corner of the programme window the marking 'Online' appears.

Exit software

- **1.** Click on the 'Online' button in the programme window.
- **2.** Close the programme window.

Components of the programme window

All tabs of the programme window have a similar structure and are divided into the following areas:



thomann MUSIC IS OUR PASSION

1	Tab for selecting a function group
2	Main menu
3	Button for the status of the connection to the PC
4	Display area
5	Control area
б	Buttons for quick access to important presets



Main menu

Menu item	Meaning
'File'	Loading user presets and saving them on the PC
'Link'	Assignment of input to output channels
'Сору'	Copying parameter settings from one input or output channel to another
'Lock'	Changing device password
'Test Tone'	Setting the internal test tone generator: Pink noise, white noise, sine wave 20 Hz20 kHz
'Language'	Language selection for the user interface of the programme (English or German)
'About'	Information about the programme version




Buttons for quick access to important presets

Range	Meaning
'Address'	Display of the marking of the device
'Preset'	Display of the current user's preset
'Store'	Saving user preset
'Recall'	Recalling user preset



'Gain' tab

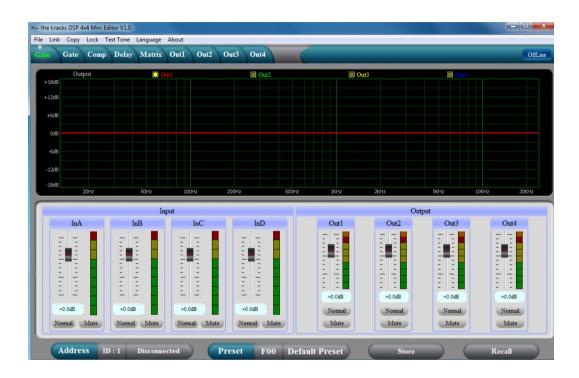


digital speaker management system

th•mann

Range	Meaning
Display area	The waveform of input and output channels is graphically displayed. Use the radio buttons ' <i>Inx</i> ' and ' <i>Outx</i> ' to determine the inputs and outputs to be displayed.
Control area	Drag the faders with the mouse to adjust the levels for the input and output channels. The 'Mute' button mutes or unmutes the respective channel. The 'Normal' / 'Inverse' button inverts the phase of the respective channel by 180° when needed.



'Gate' tab

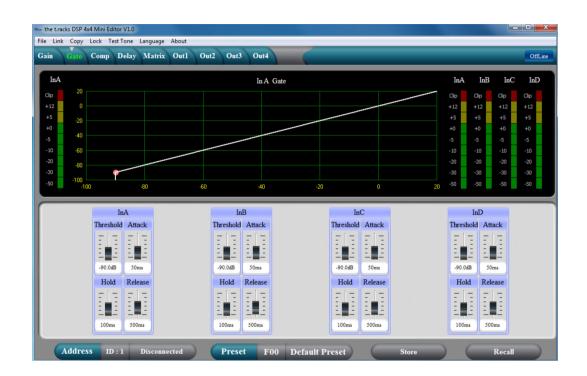


digital speaker management system

th•mann

Range	Meaning
Display area	Shows the current settings of the noise gate for the respective channel, with a symbolic level indicator symbol appearing next to it for the input channels. The red dot represents the threshold level at which the noise gate opens.
Control area	Drag the faders with the mouse to set the noise gate parameters for all input and output channels: Threshold, hold, attack, release



'Comp' tab

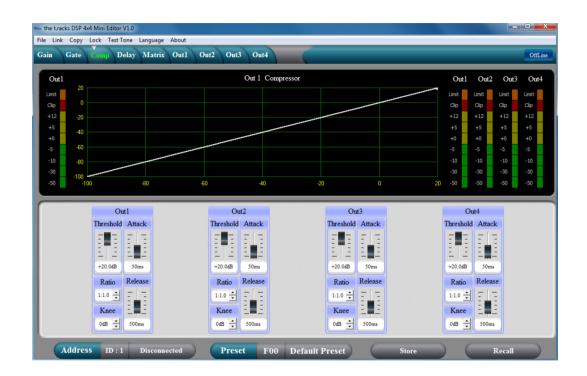


digital speaker management system

th•mann

Range	Meaning
Display area	Shows the current settings of the compressor function for the respective output channel, with a symbolic level indicator symbol appearing next to it for all output channels. The red dot marks the threshold from which the compressor operates.
Control area	Drag the faders with the mouse to set the compressor parameters for the output channels: Threshold, ratio, knee, attack, release



'Delay' tab

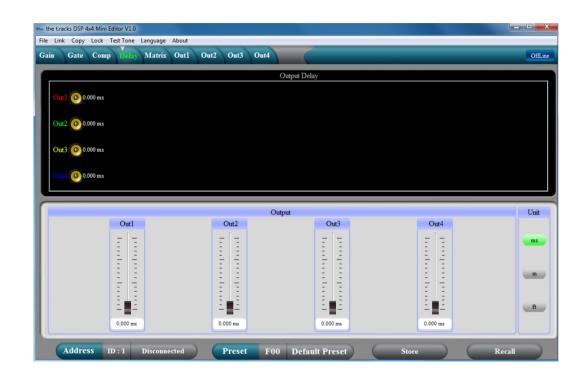

digital speaker management system

th•mann

Range	Meaning
Display area	Shows the set delays for all output channels.
Control area	Drag the faders with the mouse to adjust the delay for the respective channel. In the Unit area, you can select the measuring unit milliseconds (ms), meters (m) or feet (ft).



'Matrix' tab




digital speaker management system

th•mann

Range	Meaning
Display area	Shows the current interconnection of input to output channels. Input and output channels can be renamed. Click on a function area (such as ' <i>PEQ</i> ' or ' <i>DELAY</i> ') to open the tab. Here you can enter the corresponding parameters directly.
Control area	With a mouse click you can interconnect each input with each output channel. To each output channel, an input channel or the mix of several input channels can be freely assigned. The green input channels are assigned to the respective output channel. You can adjust the level for each combination of input and output channel.



'Out 1' - 'Out 4'

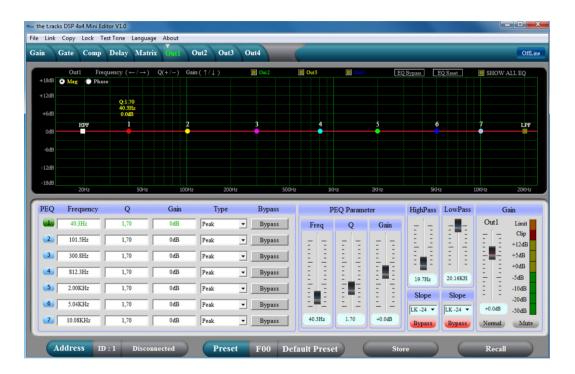

digital speaker management system

th•mann

Range	Meaning
Display area	Use the radio buttons ' <i>Mag</i> ' or ' <i>Phase</i> ' to switch the diagram from Cartesian coordinates (level vs. frequency) to polar coordinates (angle vs. frequency).
	Use the radio button 'SHOW ALL EQ' to show the parameters for all seven of the frequency bands.
	The corner points of the equalizer can be moved in the display area with the mouse.
Control area	You can enter the parameters of the parametric equalizer for each input channel and all seven fre- quency bands (numbered with ' <i>PEQ</i> ') in the left part of the window directly as numerical values: Centre frequency, filter quality, slope, filter type. With the ' <i>Bypass</i> ' button, the equalizer for the respective fre- quency band and the respective channel can be turned off temporarily.
	In the middle part of the window (' <i>PEQ Parameter</i> ') you can set the parameters centre frequency, filter quality, and slope using the faders. The setting refers to the frequency band that is highlighted green in the left part of the window.
	You can select the cut-off frequency and the filter type for the low pass and the high pass filter. Use the ' <i>Bypass'</i> button to temporarily turn off the filter.
	Drag the fader in the right part of the window using the mouse to set the level for the input channel. The <i>'Mute'</i> button mutes or unmutes the respective channel. The <i>'Normal' / 'Inverse'</i> button inverts the phase of the respective channel by 180° when needed.

thomann MUSIC IS OUR PASSION

7 Technical specifications

Input connections	Audio signal	Туре	$4 \times 1/4$ " phone socket (balanced)
		Level	+12 dBu
		Impedance	1 MΩ (stereo), 500 kΩ (mono)
Output connections	Audio signal	Туре	$4 \times 1/4$ " phone socket (balanced)
		Level	+12 dBu
		Impedance	< 500 Ω
Frequency response		20 Hz 20 kHz	
		–0.3 dB	
Total harmonic distortion (THD)		< 0.008 % (1 kHz, 0 dBu)	
Signal-to-noise ratio		> 105 dBu	
Crosstalk		> 70 dBu	
		20 Hz 20 kHz	



Digital signal processing	Digital signal processor	32 bit
	A/D-D/A converter	24 bit
	Sampling rate	48 kHz
Voltage supply	Plug-in power supply (12 V / 1 A , centre positive)	
Dimensions (W \times H \times D)	$160 \text{ mm} \times 150 \text{ mm} \times 40 \text{ mm}$	
Weight	0.6 kg	
Ambient conditions	Temperature range	0 °C40 °C
	Relative humidity	50 %, non-condensing



Further information

2-way stereo	Yes
3-way stereo	Yes
Digital	Yes
Delay	Yes
EQ	Yes



8 Plug and connection assignment

Introduction	This chapter will help you select the right cables and plugs to connect your valuable equip- ment in such a way that a perfect sound experience is ensured.
	Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!
Balanced and unbalanced trans- mission	Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is trans- mitted through the core.
	Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.
	In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conduc- tors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.

th.mann


Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

1/4" TS phone plug (mono, unbalanced)



1	Signal
2	Ground, shielding

1/4" TRS phone plug (mono, balanced)

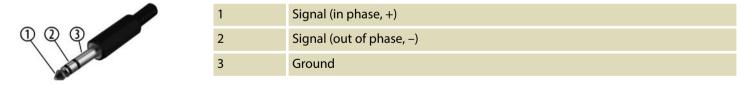



9 Protecting the environment

Disposal of the packaging material



Disposal of your old device



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.









Musikhaus Thomann • Hans-Thomann-Straße 1 • 96138 Burgebrach • Germany • www.thomann.de